


1 Parts Identification

Item #: EGB 34-48
Item #: EGB 34-48S

Stack matching pieces in piles. Using the parts list, locate and count the individual pieces and verify that you have received the correct number of pieces.

If any pieces are missing or replacement parts are required, contact Gronomics at 1-855-299-6727.

NOTE: Ground preparation is optional, however we recommend leveling area under frame of product, or place product directly on a flat level surface before filling with soil.

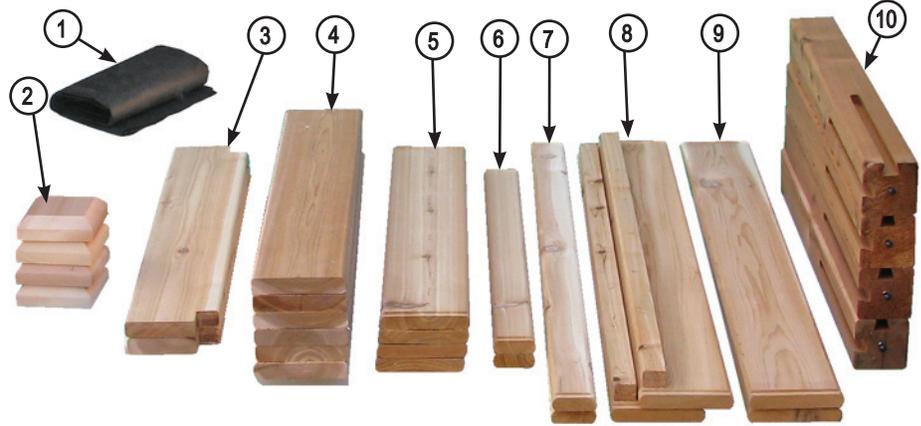

Parts List

| ITEM | QTY. | PART # | DESCRIPTION |
|------|------|---------------|---|
| 1 | 1 | FL3652 | Fabric Liner, 36" x 52" |
| 2 | 4 | 4545 | Post Cap, 4-5/8" x 4-5/8" x 1-1/2" |
| 3 | 2 | 3178N | Corner Notched Bottom Board, 31-7/8" x 5-1/2" x 1" |
| 4 | 6 | 3178 | Bottom Board, 31-7/8" x 5-1/2" x 1" |
| 5 | 4 | 3100T | Side Rail, 31" x 5-1/2" x 7/8" |
| 6 | 2 | 3101T | Side Rail Narrow Center, 31" x 2-1/2" x 7/8" |
| 7 | 2 | 4501T | Side Rail Narrow Center, 45" x 2-1/2" x 7/8" |
| 8 | 2 | 4502T | Side Rail w/Cleat, 45" x 5-1/2" x 7/8" |
| 9 | 2 | 4500T, 4500TL | Side Rail (one w/Logo), 45" x 5-1/2" x 7/8" |
| 10 | 4 | 3200E | Corner Post, 4" x 4" x 32" w/ 2 dovetailed sides 12-3/4 |

Product Care & Maintenance

Western Red Cedar will turn a weathered grey if left unfinished. Although no finish is required for cedar when used outdoors, a natural oil finish applied regularly will help maintain the beauty and minimize cracking and drying. It is recommended to use **Gronomics Garden Bed Oil (Item # GBO-1Q)**, a non-toxic, food safe finish that is very easy to apply. Apply Oil when air and wind temperatures are between 50-90degrees. Avoid applying in direct sunlight.


2 Side Rail Assembly

Stand two 4" x 4" x 32" corner posts (Item 10) upright with slots facing each corner post and slots facing you.

Locate a 45" x 5-1/2" side rail w/cleat (Item 8). With cleat located at the bottom and facing you, install side rail w/cleat into the slots and slide down to the bottom of the slots.

Repeat procedure for the two remaining corner posts and 45" x 5-1/2" side rail w/cleat.

(Soil depth option: Cleats located as shown will provide a soil depth of approximately 10". Reverse side rail w/cleat installation, cleats located at top, if a soil depth of approximately 6" is desired.)

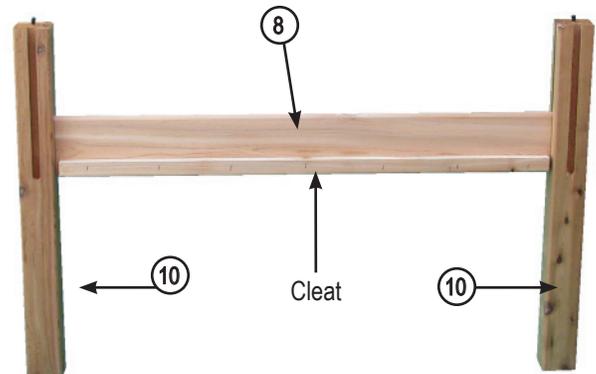


Packaged & Inspected by:

Date:

Continued

3 End Rail Assembly

Install two 31" x 5-1/2" side rails (Item 5) (with grooves down) into the slots and slide down to the bottom of the slots.

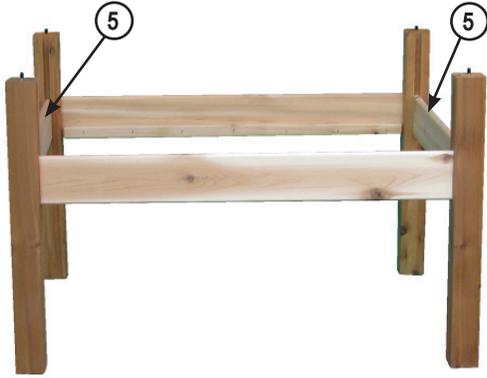


4 Narrow Center Side Rail Assembly

Install two 45" x 2-1/2" narrow center side rails (Item 7) into the slots and slide down.

Install two 31" x 2-1/2" narrow center side rails (Item 6) into the slots and slide down.

NOTE: Make sure the boards tongue and grooves fully seat together.

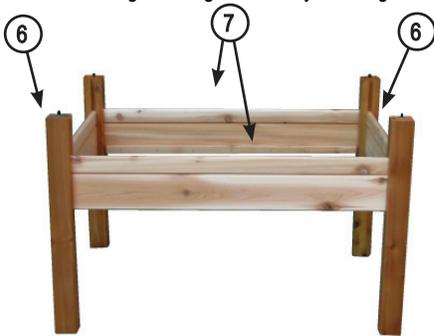


5 Final Side Rail Assembly

Install two 45" x 5-1/2" side rails (Item 9) (one w/logo) into the slots and slide down. (Side rail with Logo located to outside)

Install two 31" x 5-1/2" side rails (Item 5) into the slots and slide down.

NOTE: Make sure the boards tongue and grooves fully seat together.

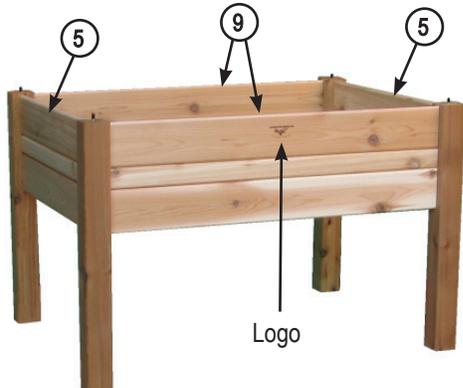

6 Bottom Board and Fabric Installation

Place one 31-7/8" x 5-1/2" corner notched bottom board (Item 3) on each end of the garden bed.

Place six 31-7/8" x 5-1/2" bottom boards (Item 4) into the garden bed. (Gap boards evenly to allow for water drainage).

Place fabric liner into the garden bed.

Soil Capacity: 8.9 Cubic Feet



7 Post Cap Assembly

Remove the rubber cap from the corner posts studs.

Align the hole of the 4" x 4" post cap (Item 2) with stud and tighten until the cap makes contact with the post.

NOTE: Do not overtighten.

Repeat procedure on all posts.

