

1 Parts Identification


Item #: EGBD 24-48

Item #: EGBD 24-48S

Stack matching pieces in piles. Using the parts list, locate and count the individual pieces and verify that you have received the correct number of pieces.

If any pieces are missing or replacement parts are required, contact Gronomics at 1-855-299-6727.

NOTE: Ground preparation is optional, however we recommend leveling area under frame of product, or place product directly on a flat level surface before filling with soil.

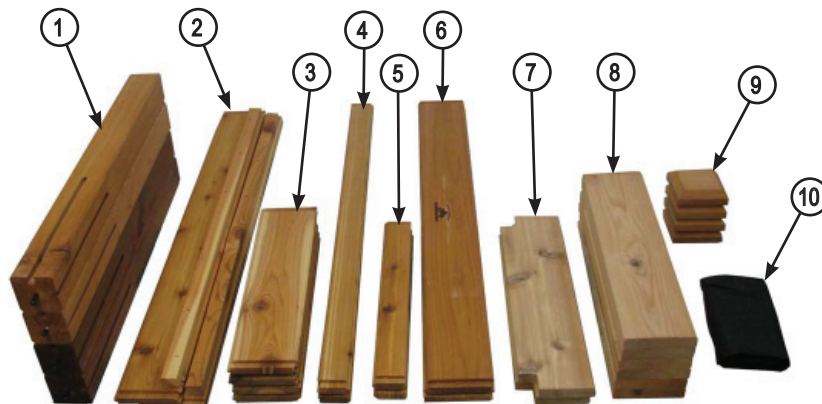

Parts List

Product Care & Maintenance

ITEM	QTY.	PART #	DESCRIPTION
1	4	3200E	Corner Post, 4x 4" x 32" w/12-3/4" Dovetail Depth
2	2	4502T	Side Rail w/Cleat, 45" x 5-1/2" x 1"
3	4	2100T	Side Rail, 21" x 5-1/2" x 1"
4	2	4501T	Side Rail Narrow Center, 45" x 2-1/2" x 1"
5	2	2101T	Side Rail Narrow Center, 21" x 2-1/2" x 1"
6	2	4500T, 4500TL	Side Rail (one w/Logo), 45" x 5-1/2" x 1"
7	2	2178N	Corner Notched Bottom Board, 22" x 5-1/2" x 1"
8	6	2178	Bottom Board, 22" x 5-1/2" x 1"
9	4	4545	Post Cap, 4" x 4" x 1-1/2"
10	1	FL3652	Fabric Liner, 36" x 52"


Western Red Cedar will turn a weathered grey if left unfinished. Although no finish is required for cedar products when used outdoors, a natural oil finish applied regularly will help maintain the beauty and minimize cracking and drying. It is recommended to use **Gronomics Garden Bed Oil (Item # GBO-1Q)**, a non-toxic, food safe finish that is very easy to apply. Apply Oil when air and wind temperatures are between 50-90degrees. Avoid applying in direct sunlight.

2 Side Rail Assembly

Stand two 4" x 4" x 32" corner posts (Item 1) upright with slots facing you and slots facing each corner post.

Locate a 45" x 5 1/2 " side rail w/cleat (Item 2). With the cleat located at the bottom and facing you, install side rail w/cleat into the slots and slide down to the bottom of the slots.

Repeat procedure for the two remaining corner posts and 45" x 5-1/2 " side rail w/cleat.

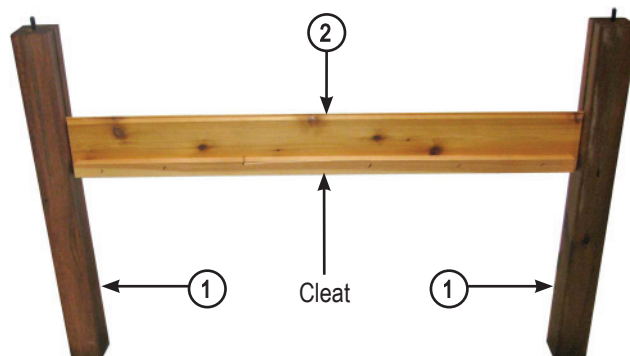


Packaged & Inspected by:

Date:

Continued

3 End Rail Assembly

Install two 21" x 5-1/2" side rails (Item 3) (with the groove down) into the slots and slide down to the bottom of the slots.

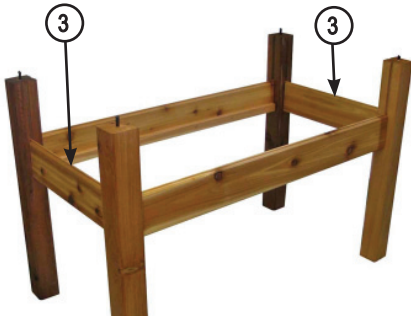


4 Narrow Center Side Rail Assembly

Install two 45" x 2-1/2" side rails (Item 4) into the slots on each side of the garden bed and slide down.

Install two 21" x 2-1/2" side rails (Item 5) into the slots on each end of the garden bed and slide down.

NOTE: Make sure the boards tongue and grooves fully seat together.

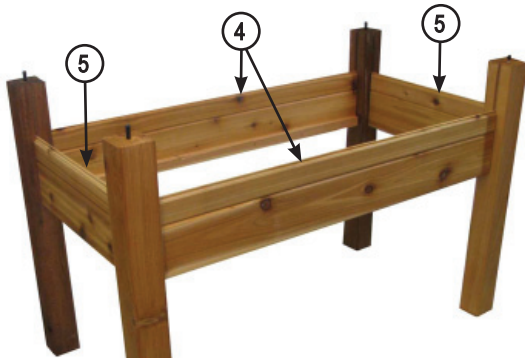


4 Final Side Rail Assembly

Install two 45" x 5-1/2" side rails (Item 6) (one w/Logo) into the slots on each side of the garden bed and slide down.

Install two 21" x 5-1/2" side rails (Item 3) into the slots on each end of the garden bed and slide down.

NOTE: Make sure the boards tongue and grooves fully seat together.

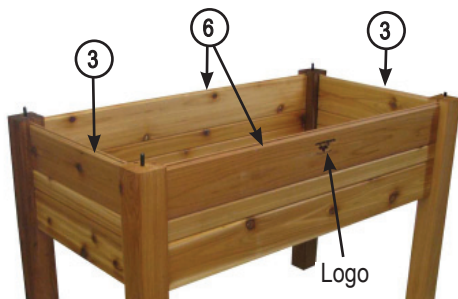


5 Bottom Board and Fabric Installation

Place one 22" x 4-1/2" corner notched bottom board (Item 7) on each end of the garden bed.

Place six 22" x 4-1/2" bottom boards (Item 8) into the garden bed. (Gap boards evenly to allow for water drainage).

Place fabric liner into the garden bed.

Soil Capacity: 5.9 Cubic Feet.

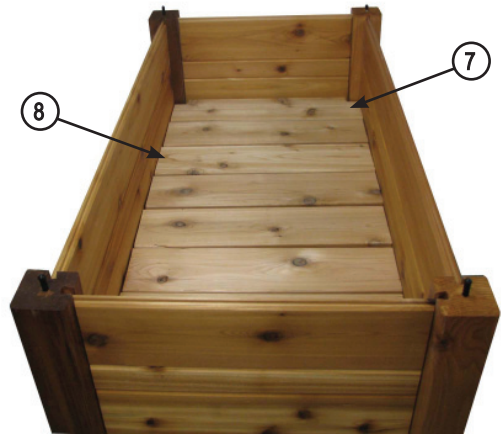

6 Post Cap Assembly

Remove the rubber cap from the corner posts studs.

Align the hole of the 4" x 4" post cap (Item 9) with stud and tighten until the cap makes contact with the post.

NOTE: Do not overtighten.

Repeat procedure on all posts.

