


1 Parts Identification

Item #: MEGB 34-34EXT

Stack matching pieces in piles. Using the parts list, locate and count the individual pieces and verify that you have received the correct number of pieces.

Check all the pieces for damage. If any pieces are damaged or missing, contact Gronomics 1-855-299-6727.

NOTE: Ground preparation is optional, however we recommend leveling area under frame of product, or place product directly on a flat level surface before filling with soil

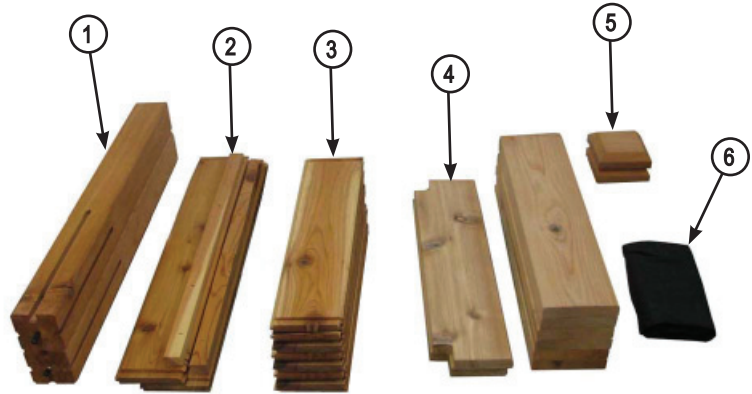

Parts List

Product Care & Maintenance

ITEM	QTY.	PART #	DESCRIPTION	Product Care & Maintenance
1	2	3200E	Corner Post, 4" x 4" x 32"	Western Red Cedar will turn a weathered grey if left unfinished. Although no finish is required for cedar products when used outdoors, a natural oil finish applied regularly will help maintain the beauty and minimize cracking and drying. It is recommended to use Gronomics Garden Bed Oil (Item # GBO-1Q) , a non-toxic, food safe finish that is very easy to apply. Apply Oil when air and wind temperatures are between 50-90degrees. Avoid applying in direct sunlight.
2	2	3102T	Side Rail w/Cleat, 31" x 5-1/2" x 1" 3100T,	
3	7	3100T, 3100TL	Side Rail, (one w/Logo) 31" x 5-1/2" x 1"	
4	2	3178NR	Corner Notched Bottom Board, 31-7/8" x 4-1/2" x 1"	
5	4	3178	Bottom Board, 31-7/8" x 5-1/2" x 1"	
6	2	4545	Post Cap, 4" x 4" x 1-1/2"	
7	1	FL3652	Fabric Liner, 22" x 36"	

2 Side Rail Assembly


NOTE: The garden bed extension can be added to any side desired or multiple garden bed extensions can be added.

Stand a 4" x 4" x 32" corner post (Item 1) upright.

Locate a 31" x 5 1/2 " side rail w/cleat (Item 2). With the cleat located at the bottom and the cleat facing inward, install the side rail w/cleat between the posts and slide down to the bottom of the slots.

Install two 31" x 5 1/2 " side rails (Item 3) (one w/Logo) between the posts and slide down.

NOTE: Make sure the boards tongue and grooves fully seat together.

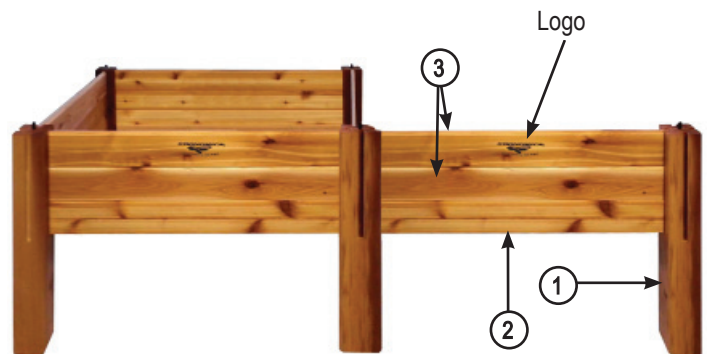

Packaged & Inspected by:

Date:

Continued


3 Final Side Rail Assembly

Stand a 4" x 4" x 32" corner post (Item 1) upright.

Locate a 31" x 5 1/2" side rail w/cleat (Item 2). With the cleat located at the bottom and the cleat facing inward, install the side rail w/cleat between the posts and slide down to the bottom of the slots.

Install the five remaining 31" x 5 1/2" side rails (Item 3) between the posts and slide down.

NOTE: Make sure the boards tongue and grooves fully seat together.

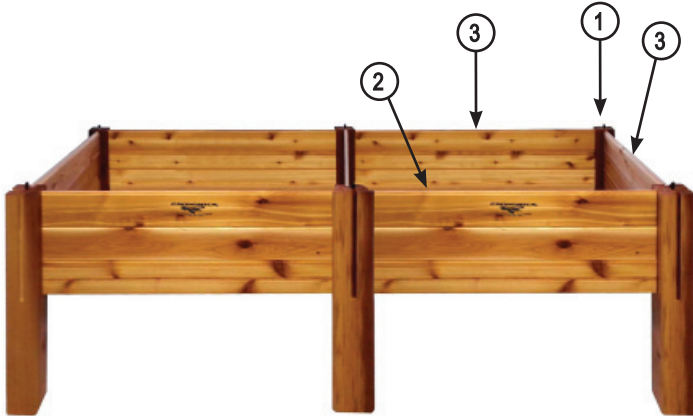

5 Bottom Board and Fabric Installation

Place one 31" x 5-1/2" corner notched bottom board (Item 4) on each end of the garden bed.

Place four 31" x 5-1/2" bottom boards (Item 5) into the garden bed. (Gap boards evenly to allow for water drainage).

Place fabric liner into the garden bed.

Soil Depth: approximately 12-1/2"

Soil Capacity: 8.6 Cubic Feet



6 Post Cap Assembly

Remove the rubber cap from the corner posts studs.

Align the hole of the 4" x 4" post cap (Item 6) with stud and tighten until the cap makes contact with the post.

NOTE: Do not overtighten.

Repeat procedure on all posts.

