


1 Parts Identification

Item #: MEGB 34-34

Stack matching pieces in piles. Using the parts list, locate and count the individual pieces and verify that you have received the correct number of pieces.

If any pieces are missing or replacement parts are required, contact Gronomics at 1-855-299-6727.

NOTE: Ground preparation is optional, however we recommend leveling area under frame of product, or place product directly on a flat level surface before filling with soil.

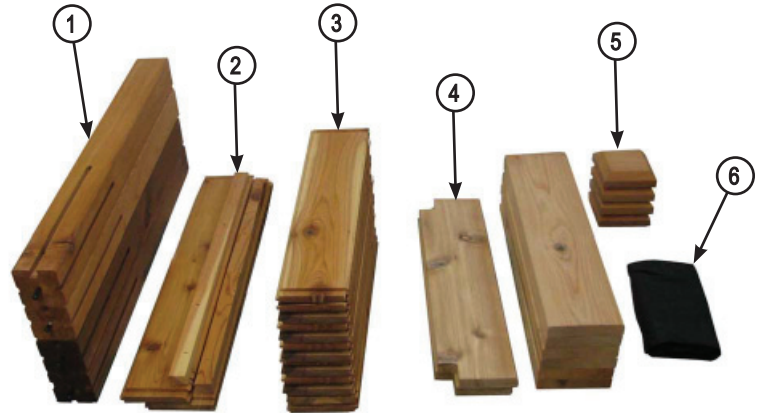

Parts List

Product Care & Maintenance

ITEM	QTY.	PART #	DESCRIPTION
1	4	3200E	Corner Post, 4" x 4" x 32"
2	2	3102T	Side Rail w/Cleat, 31" x 5-1/2" x 1"
3	10	3100T, 3100TL	Side Rail, (one w/Logo) 31" x 5-1/2" x 1"
4	2	3178NR	Corner Notched Bottom Board, 31-7/8" x 4-1/2" x 1"
5	4	3178	Bottom Board, 31-7/8" x 5-1/2" x 1"
6	4	4545	Post Cap, 4" x 4" x 1-1/2"
7	1	FL3652	Fabric Liner, 22" x 36"


Western Red Cedar will turn a weathered grey if left unfinished. Although no finish is required for cedar products when used outdoors, a natural oil finish applied regularly will help maintain the beauty and minimize cracking and drying. It is recommended to use **Gronomics Garden Bed Oil (Item # GBO-1Q)**, a non-toxic, food safe finish that is very easy to apply. Apply Oil when air and wind temperatures are between 50-90degrees. Avoid applying in direct sunlight.

2 Side Rail Assembly

Stand two 4" x 4" x 32" corner posts (Item 1) upright.

Locate a 31" x 5 1/2 " side rail w/cleat (Item 2). With cleat located at the bottom and facing you, install side rail w/cleat into the slots and slide down to the bottom of the slots.

Repeat procedure for the two remaining corner posts and 31" x 5-1/2 " side rail w/cleat.

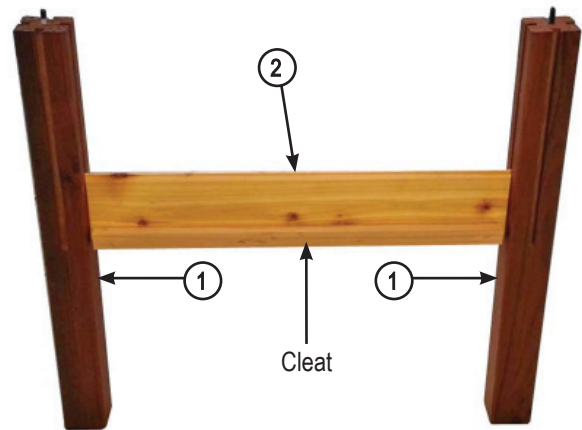


Packaged & Inspected by:

Date:

Continued

3 Side Rail Assembly (Continued)

Install two 31" x 5-1/2" side rails (Item 3) into the slots and slide down to the bottom of the slots.

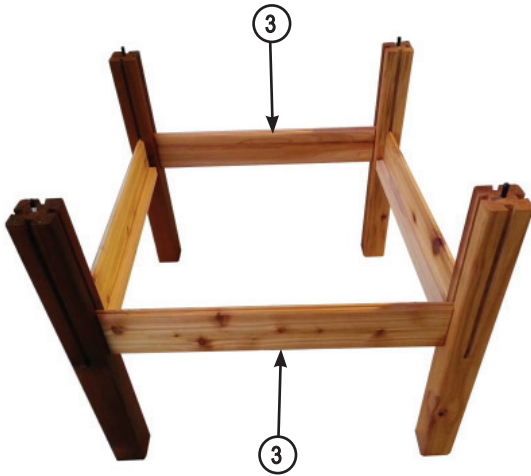

5 Bottom Board and Fabric Installation

Place one 31" x 4-1/2" corner notched bottom board (Item 4) on each end of the garden bed.

Place four 31" x 5-1/2" bottom boards (Item 5) into the garden bed. (Gap boards evenly to allow for water drainage).

Place fabric liner into the garden bed.

Soil Depth: approximately 12-1/2"


Soil Capacity: 8.6 Cubic Feet



4 Final Side Rail Assembly

Install eight remaining 31" x 5-1/2" side rails (Item 3) one w/Logo into the slots on each side of the garden bed and slide down.

NOTE: Make sure the boards tongue and grooves fully seat together.

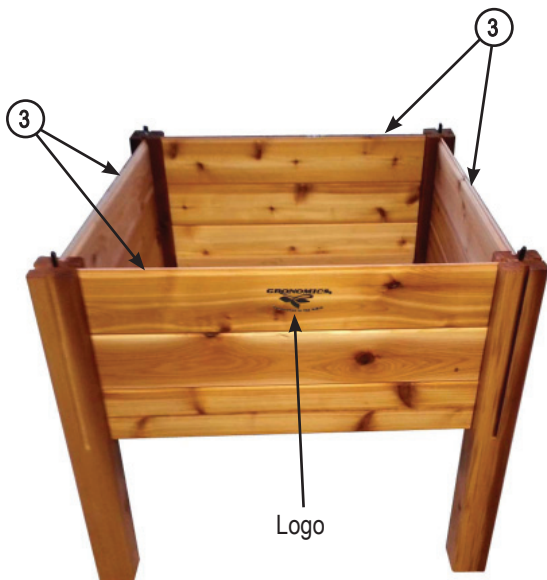

6 Post Cap Assembly

Remove the rubber cap from the corner posts studs.

Align the hole of the 4" x 4" post cap (Item 6) with stud and tighten until the cap makes contact with the post.

NOTE: Do not overtighten.

Repeat procedure on all posts.

