


1 Parts Identification

Item #: VEGB 24-48

Stack matching pieces in piles. Using the parts list, locate and count the individual pieces and verify that you have received the correct number of pieces.

If any pieces are missing or replacement parts are required, contact Gronomics at 1-855-299-6727.

NOTE: Ground preparation is optional, however we recommend leveling area under frame of product, or place product directly on a flat level surface before filling with soil.

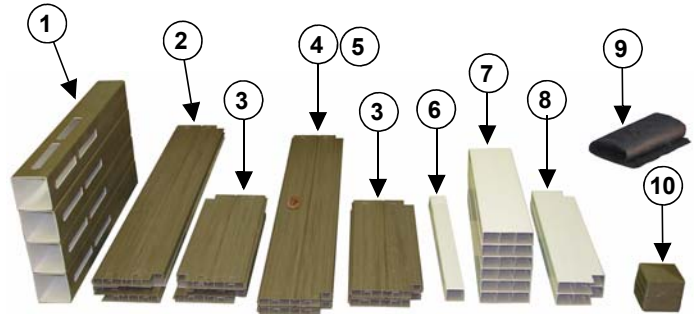


Parts List

ITEM	QTY.	PART #	DESCRIPTION
1	4	V3200E	Corner Post, 4" x 4" x 31"
2	2	V4502	Side Rail w/Cleat, 45-1/2" x 8" x 1"
3	4	V2150	Side Rails, 21x 5-1/2"x 7/8"
4	1	V4550	Side Rail w/Logo, 45-1/2" x 8" x 1"
5	1	V4550	Side Rail, 45-1/2" x 8" x 1"
6	1	V2115	Bottom Board, 22" x 1-1/2" x 1"
7	5	V2200	Bottom Board, 22" x 6" x 1"
8	2	V2200N	Corner Notched Bottom Panel, 22" x 6" x 1"
9	1	FL3652	Fabric Liner, 36" x 52"
10	4	4545	Post Cap, 4-5/8" x 4-5/8" x 1-1/2"

2 Side Rail w/Cleat Assembly

Stand one 4" x 4" x 31" corner post (Item 1) upright with slots facing you and slots facing to the right.

Locate a 45-1/2" x 8" x 1" side rail w/cleat (Item 2). With the cleat located at the bottom and facing you, install side rail w/cleat into the lower slot and push inward until the tabs on the side rail w/cleat are locked to the corner post.

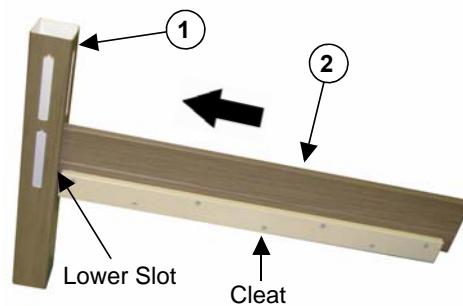

Packaged & Inspected by:


Date:

Continued

3 Side Rail Assembly

Install the 45-1/2" x 8" x 1" side rail w/logo (Item 4) (w/Logo facing away from you) onto the top of side rail w/cleat.


Slide the side rail w/Logo into the slot on the corner post until tabs are locked to corner post.

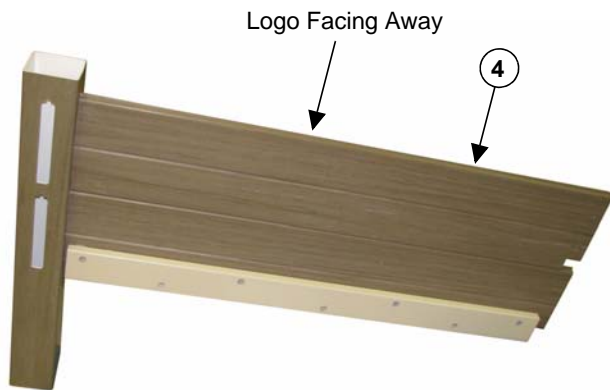

5 End Rail Assembly

Align two 21-1/2" x 8" x 1" side rails (Item 3) to the 4" x 4" x 31" corner post slots.

Slide the side rails into the corner post slots until the tabs on the side rails lock to the corner post.

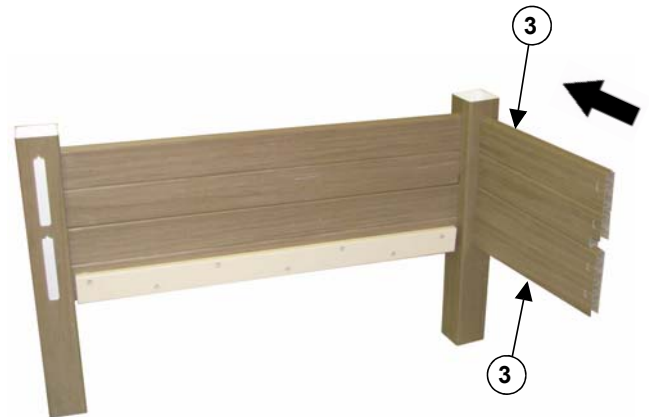


4 Side Rail Assembly Continued

Align the 4" x 4" x 31" corner post (Item 1) with slots facing you and slots facing the ends of the 45-1/2" x 8" x 1" side rail w/ cleat (Item 2) and 45-1/2" x 8" x 1" side rail w/Logo (Item 4).

Slide the corner post onto the side rails until the tabs on the side rails lock to the corner post.

Repeat steps 1 - 4 for the two remaining 4" x 4" x 31" corner posts, 45-1/2" x 8" x 1" side rail w/cleat and 45-1/2" x 8" x 1" side rail.

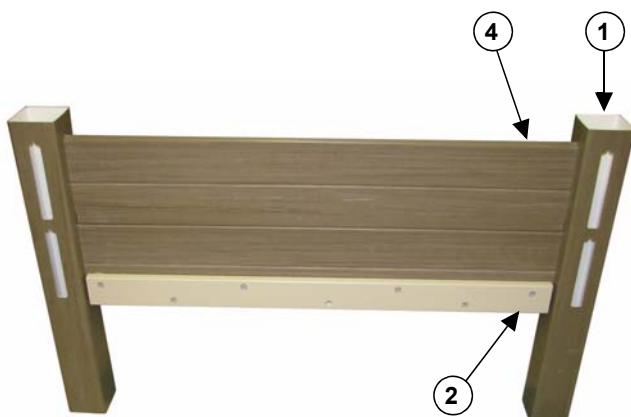


6 End Rail / Side Rail Assembly

Align the other side rail assembly (as shown).

Align the corner post (Item 1) slots to the 21-1/2" x 8" x 1" side rails (Item 3).

Slide the corner post onto the side rails until the side rail tabs lock to the corner post.

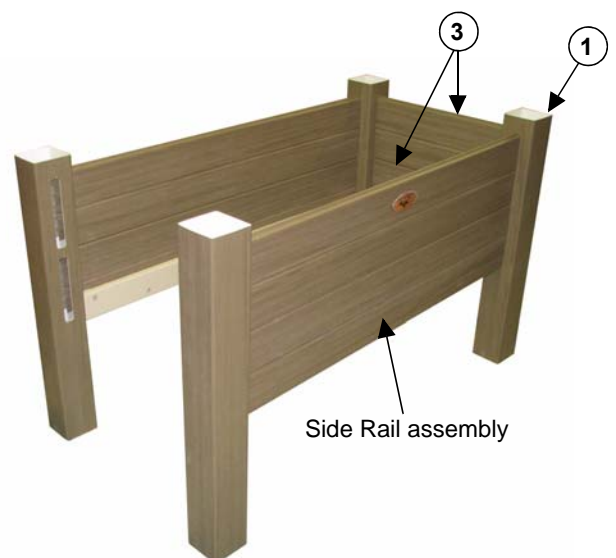


Continued

7 Final End And Side Rail Assembly

Place the two remaining 21-1/2" x 8" x 1" side rails (Item 3) together and place between the two 4" x 4" x 31" corner posts (Item 1).

Slide the side rails into each corner post until the tabs on the side rails lock to the corner posts

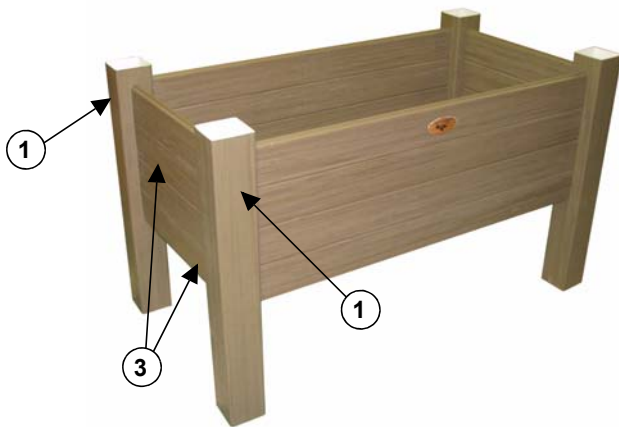

8 Corner Notched Bottom Panel Assembly

Place one 22" x 5-1/2" x 1-1/2" corner notched bottom panel (Item 8) on each end of the garden bed.



9 Bottom Panel And Post Cap Assembly

Place five 22" x 5-1/2" x 1-1/2" x 1" bottom panels (Item 7) and one 22" x 1-1/2" x 1" bottom panel (Item 6) into the garden bed.

(Gap boards evenly to allow for water drainage).

Install the 4" x 4" post caps (Item 10) onto the corner posts.

Place fabric liner into the garden bed.

