

### 1 Parts Identification Box 1

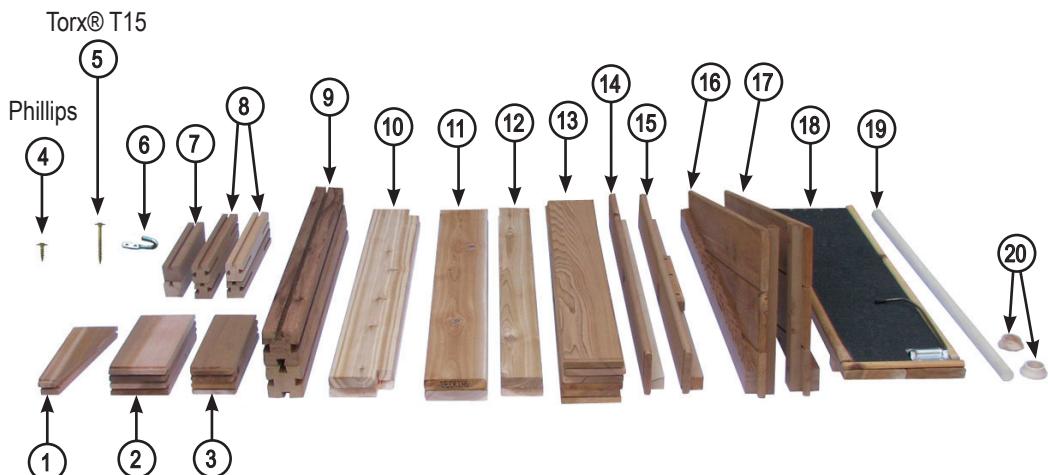
DCCPC 45-45

Remove contents from Box 1 of 2.

Stack matching pieces in piles. Using the parts list, locate and count the individual pieces and verify that you have received the correct number of pieces.

If any pieces are missing or replacement parts are required, contact Gronomics at 1-855-299-6727.

NOTE: It is recommended to place a protective layer between the ground and the pieces during assembly. This will help prevent damage to the pieces.



### Box 1 of 2

ITEM	QTY.	PART #	DESCRIPTION
1	2	NASR11	Nesting Angle Side Rail, 11-1/2" x 4-1/4"
2	4	NSR11.5	Nesting Side Rail, 11-1/2" x 5-1/2"
3	4	NSR12	Nest Side Rail, 11-5/8" x 4"
4	4	8-3/4	Screw, #8 x 3/4"
5	4	R48-234ZY	Screw, GRK #8 x 2-3/4"
6	1	RHOOK	Ramp Hook
7	2	NP12	Nesting Post, 12-3/8" x 1-7/8"
8	4	NP15	Nesting Post, 15-1/4" x 1-7/8"
9	2	CRP37	Rear Post, 36-3/4" x 3-1/4"
10	2	4078N	Bottom Notched Board, 40-7/8" x 5-1/4"
11	2	4078	Bottom Board, 40-7/8" x 5-1/4"
12	2	4078R	Bottom Ripped Board, 40-7/8" x 3-5/8"
13	6	CSB40	Coop Side Board, 40" x 5-3/8"
14	1	FCSR40	Front Cleat Side Rail(w/ Logo) 40"x4"
15	1	BCSR40	Back Cleat Side Rail, 40" x 4"
16	1	ACS12RH	Angled Coop Side RH, 12-1/2 " x 14-5/8"
17	1	ACS12LH	Angled Coop Side LH, 12-12" x 14-5/8"
18	1	RAMP	Ramp, 39-3/4" x 11"
19	1	CCRR41	Roost Rod, 40-3/4" x 1-1/4"
20	2	CCRRH	Roost Rod Holder

Packaged & Inspected by:

Date:

Continued

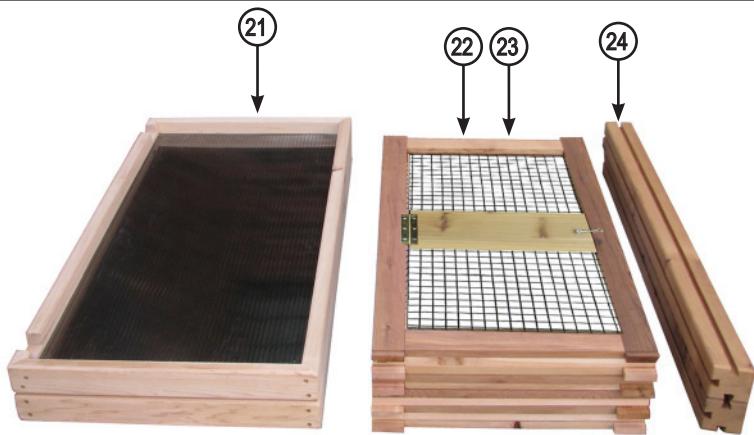
**2****Parts Identification Box 2**

Remove contents from Box 2 of 2.

Stack matching pieces in piles. Using the parts list, locate and count the individual pieces and verify that you have received the correct number of pieces.

If any pieces are missing or replacement parts are required, contact Gronomics at 1-855-299-6727.

**NOTE:** It is recommended to place a protective layer between the ground and the pieces during assembly. This will help prevent damage to the pieces.

**Box 2 of 2**

ITEM	QTY.	PART #	DESCRIPTION
21	1	CCP5050	Folding Lid 50" X 50"
22	1	SPD4021	Screen Panel, W/Door 40" x 21-1/2"
23	4	SP4021	Screen Panel, 40" x 21-1/2"
24	2	CFP48	Front Post, 47-3/4" x 3-1/4"

**3****Screen Panel Assembly**

**NOTE:** Always assemble the chicken coop on a level surface and keep posts and parts square when assembling.

**NOTE:** The chicken coop pet cottage contains one screen panel w/door (Item 22). The screen panel w/door can be located on any side desired of the chicken coop pet cottage, choose which side to locate the screen panel w/door when performing steps 3 thru 5.

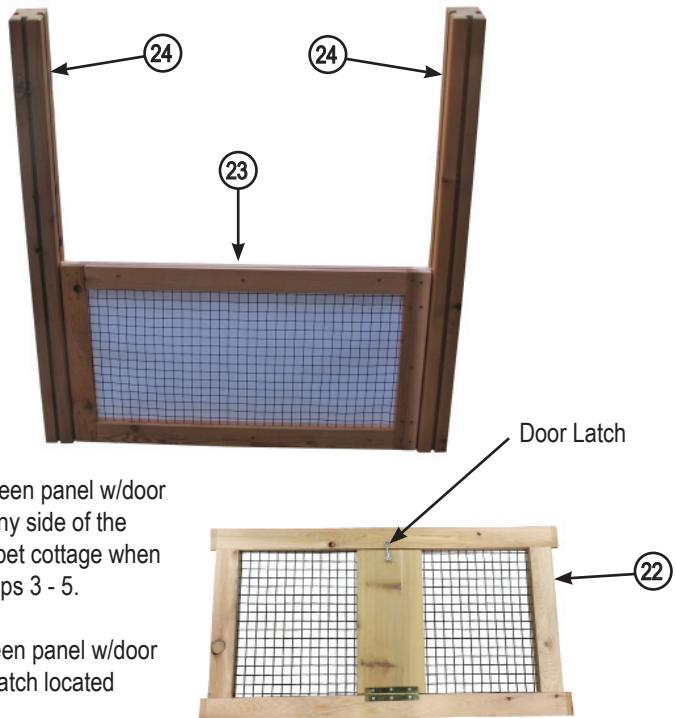
**NOTE:** If assembling a chicken coop with a run kit, refer to chicken coop run kit instructions step 2 for the blank panel installation, before proceeding with chicken coop assembly.

Position a screen panel (Item 22 or Item 23) with the screw heads facing you.

Position the 47-3/4" posts (Item 24) with the flat end (straight cut) towards the ground and with a slot facing you and a slot facing left and right.

Align the screen panel tabs with the post slots and slide a post down onto the screen panel on each end.

**NOTE:** Make sure the screen panel tabs are fully inserted into the post slots.

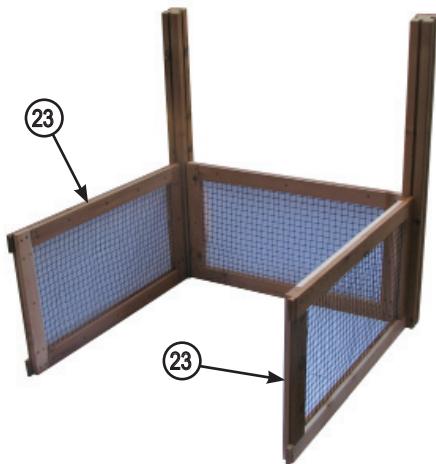


Locate the screen panel w/door (Item 22) on any side of the chicken coop pet cottage when performing steps 3 - 5.

Install the screen panel w/door with the door latch located upward.

**4****Screen Panel Assembly Continued**

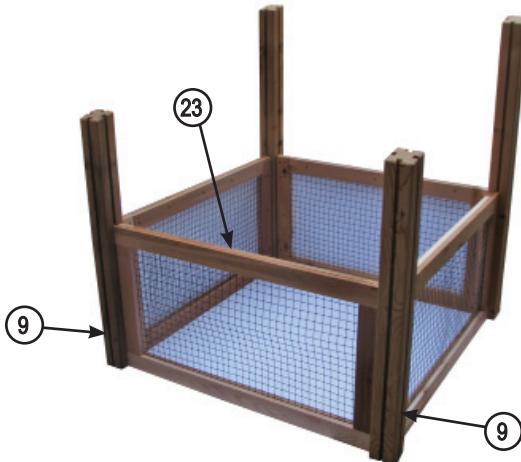
Align a screen panel (Item 22 or Item 23) with the screw heads facing in. Align the screen panel tabs with the post slots and slide the screen panel down on both posts.

**5****Screen Panel Assembly Continued**

Position a screen panel (Item 22 or 23) (screw heads facing away from you) between the two previously installed screen panels.

Position the 36-3/4" posts (Item 9) with the flat end (straight cut) towards the ground, make sure the top of the post tapered cut is sloped towards you.

Align the screen panel tabs with the post slots and slide the posts down.

**6****Side Rail And Coop Side Board Assembly**

Install the front cleat side rail (w/Logo) (Item 14) (with the cleat located at the bottom and facing in) between the two 47-3/4" posts and slide down.

Install the back cleat side rail (Item 15) (with the cleat located at the bottom and facing in) between the two 36-3/4" posts and slide down.

Install four 40" x 5-3/8" coop side boards (Item 13) between the posts and slide down.

**7****Roost Floor Assembly**

Install the 40-7/8" x 5-1/4" bottom notched boards (Item 10), 40-7/8" x 3-5/8" bottom ripped boards (Item 12), and 40-7/8" x 5-1/4" bottom boards (Item 11) as shown on each side of the chicken coop.



**Continued**

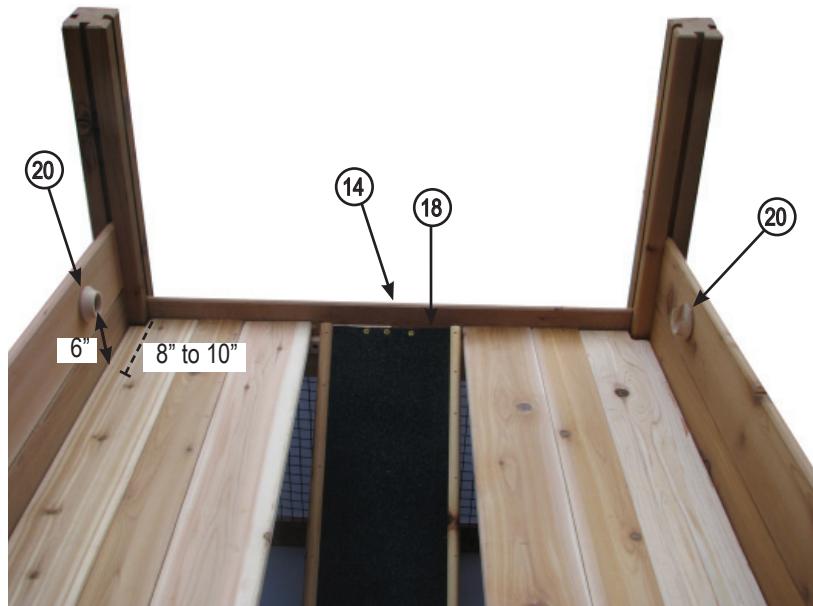
**8****Ramp And Roost Rod Holder Assembly**

Place the ramp (Item 18) onto the front cleat side rail (w/ Logo) (Item 14) as shown. Lower the ramp end with the handle to the ground.

Measure 8" to 10" from the front cleat side rail (w/ Logo) (Item 14), then measure 6" up from the bottom notched board and place a mark. Center the roost rod holder on the mark and secure the roost rod holder (Item 19) with a screw (Item 4).

Repeat procedure on the opposite side and secure the roost rod holder (Item 20).

**NOTE:** When installing the roost rod holder with the open end, make sure the open end of the roost rod holder is located upward.

**9****Roost Rod And Angled Coop Side Assembly**

Place the roost rod (Item 19) into the roost rod holders.

Align the screen panel w/ winterized window cover (Item 25) tabs (screw heads facing in) with the post slots and slide the screen panel down.

**NOTE:** The winterized window cover can be installed or removed from the screen panel (Item 25) as desired.

Align the angled coop side RH (Item 16) & angled coop side LH (Item 17) between the posts and slide down.



**Continued**

**10**

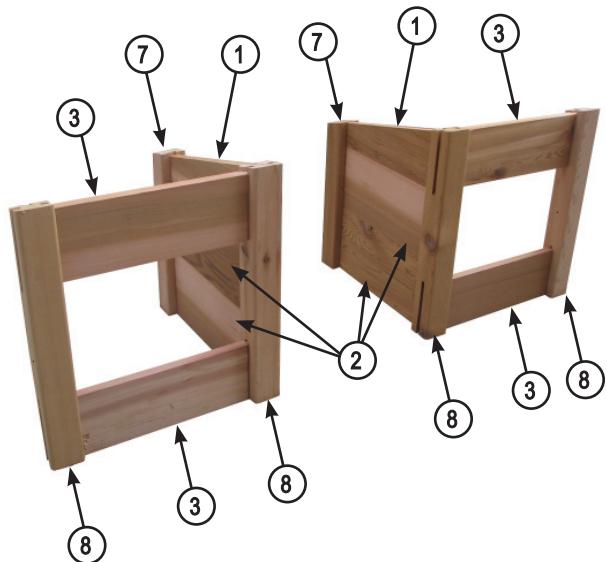
## Coop Side Board Assembly

Install the two remaining 40' x 5-3/8" coop side boards (Item 13) between the posts and slide down.

**12**

## Nesting Box Assembly

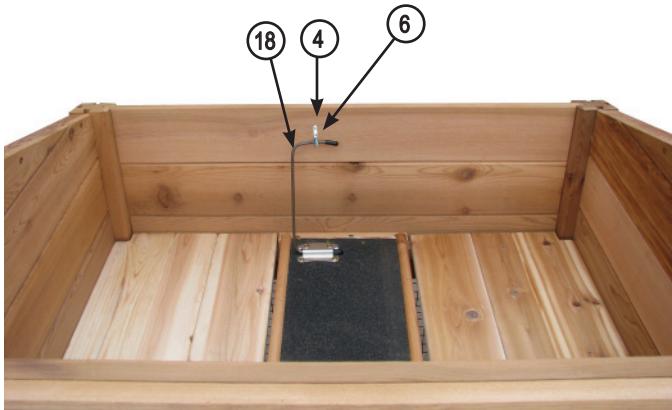
Assemble the nesting boxes as shown.

**11**

## Ramp And Ramp Hook Assembly

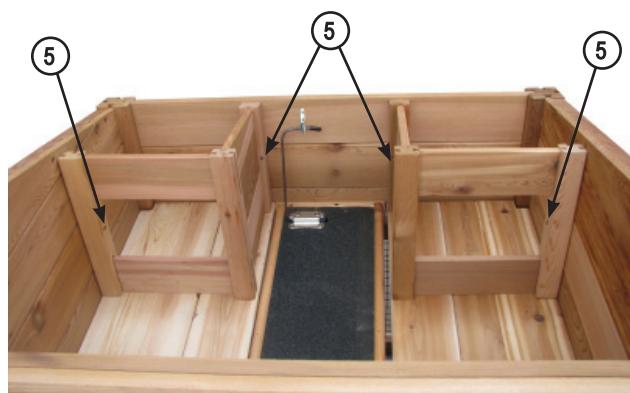
Using the handle on the ramp (Item 18), raise the ramp up until the ramp is level with the floor. Place the ramp hook (Item 6) onto the ramp handle and secure the ramp hook to the coop side board with two #8 x 3/4" screws (Item 4).

NOTE The ramp can be positioned in the raised or lowered position as desired.

**13**

## Nesting Box Assembly Continued

Place the nesting boxes as shown and install four #8 x 2-3/4" screws (Item 5) from the outside of the coop into the center of the nesting box posts.



**Continued**

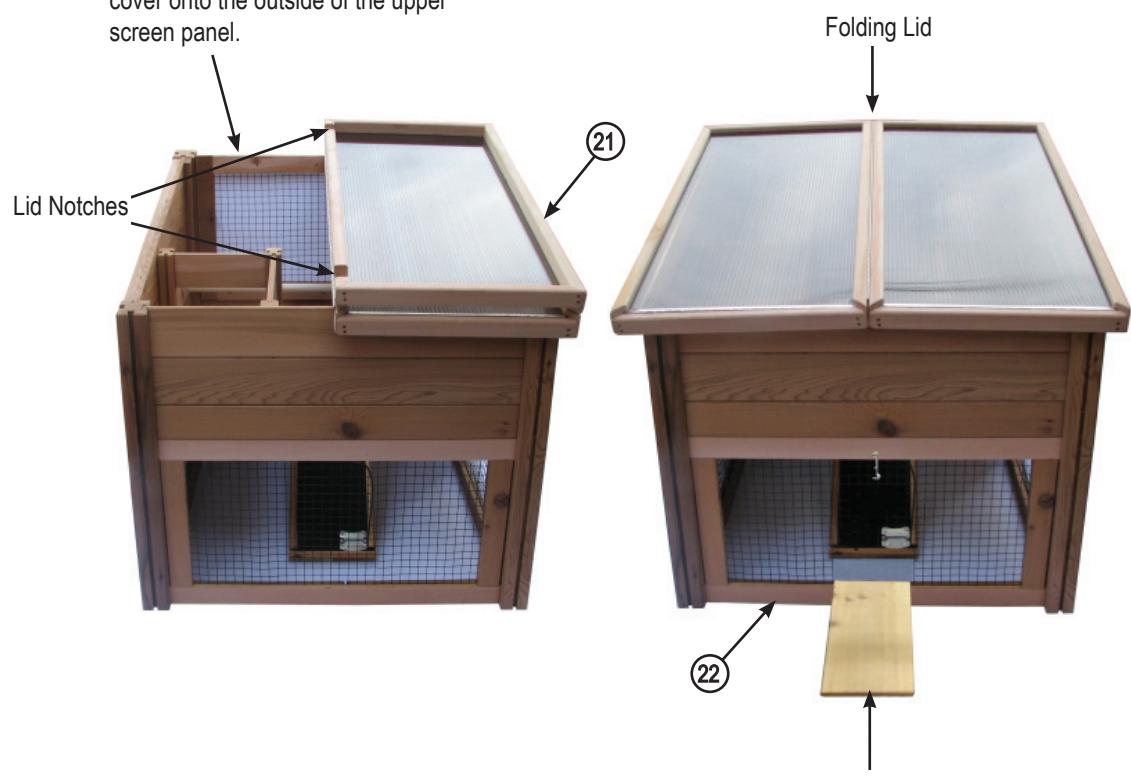
**NOTE:** Make sure the folding lid is positioned as shown (far right) before placing onto the chicken coop. The open end (no trim) of the folding lid located at the bottom, to allow water to run off.

Install the folding lid (Item 21) onto the chicken coop as shown. Make sure the folding lid notches are aligned and positioned onto the chicken coop screen panel and coop side board.

Close the folding lid.

**NOTE:** The winterized window cover is installed onto the upper screen panel to help protect pets from inclement weather, but can be removed in the summer.

If desired, install the winterized window cover onto the outside of the upper screen panel.



**NOTE:** Open or close the door as desired on the screen panel w/door (Item 22).