


### 1 Parts Identification Box 1

Item #: PTBT 59-39

Stack matching pieces in piles. Using the parts list, locate and count the individual pieces and verify that you have received the correct number of pieces.

If any pieces are missing or replacement parts are required, contact Gronomics at 1-855-299-6727.

NOTE: It is recommended to place a protective layer between the ground and the pieces during assembly. This will help prevent damage to the pieces.

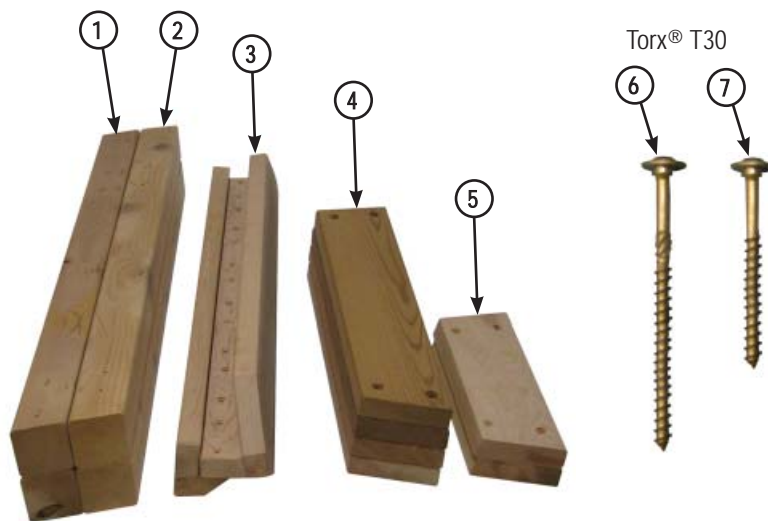

### Product Care & Maintenance

Western Red Cedar will turn a weathered grey if left unfinished. Although no finish is required for cedar when used outdoors, a natural oil finish applied regularly will help maintain the beauty and minimize cracking and drying. It is recommended to use Gronomics Garden Bed Oil (Item# GBO-1Q), a non-toxic, food safe finish that is very easy to apply.

Apply oil when air and wind temperatures are between 50-90 degrees. Avoid applying in direct sunlight.

### Box 1 of 2

ITEM	QTY.	PART #	DESCRIPTION
1	2	PTBT4200-X	Corner Posts, 3-1/4" x 3-1/4" x 42" (X)
2	2	PTBT4200-O	Corner Posts, 3-1/4" x 3-1/4" x 42" (O)
3	2	TTSB2638	Table Top Side Braces, 2" x 6" x 38" With 2 x 2 x 38" Cleat
4	4	TLLB2624	Table Top Lower Leg Braces, 2" x 6" x 24-1/2"
5	2	TTULB2615	Table Top Upper Leg Braces, 2" x 6" x 15"
6	32	RSS516-4ZY	GRK RSS Screws, 5/16" x 4"
7	28	RSS516-212ZY	GRK RSS Screws, 5/16" x 2-1/2"

Packaged & Inspected by:


Date:

Continued

## 2 Parts Identification Box 2

Remove contents from Box 2 of 2.  
Stack matching pieces in piles. Using the parts list, locate and count the individual pieces and verify that you have received the correct number of pieces.

NOTE: It is recommended to place a protective layer between the ground and the pieces during assembly.

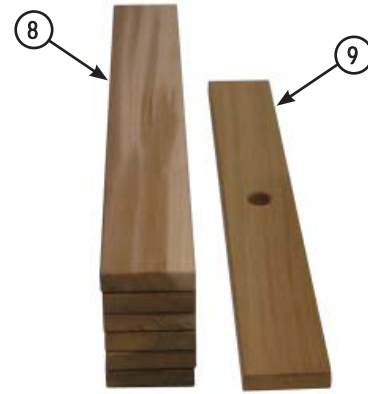

### Box 2 of 2

ITEM	QTY.	PART #	DESCRIPTION
8	6	TTP2659	Table Top Panels, 2" x 6" x 59"
9	1	TTCP2659	Table Top Center Panel w/Hole, 2" x 6" x 59"


## 3 Corner Post Assembly

NOTE: Do not fully tighten screws on legs and side braces during assembly.

NOTE: Once the leg assembly is completed and table is placed on a level surface fully tighten screws.

Locate one 3-1/4" x 3-1/4" x 42" corner post labeled "X" (Item 1) and one corner post 3-1/4" x 3-1/4" x 42" labeled "O" (Item 2). Place the two corner posts on the ground with the X & O located as shown. The two pre-drilled holes facing up and two pre-drilled holes facing to the outside (at the top of the corner posts).

NOTE: The two pre-drilled holes at the top of the corner posts (facing up) (opposite of the X & O) should be farther down and closer together than the two pre-drilled holes located to the outside.

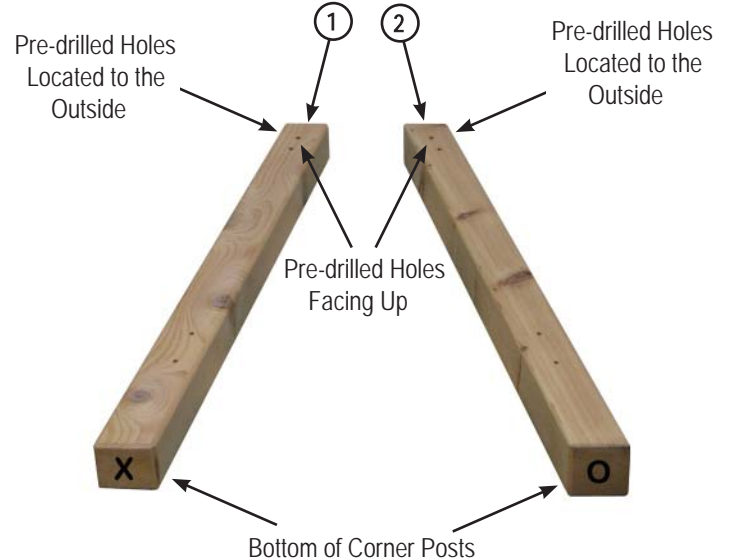


Continued

#### 4 Lower Leg Brace Assembly

Locate one 2" x 6" x 24-1/2" lower leg brace (Item 4). Install four 5/16" x 4" screws (Item 8) in the pre-drilled holes of the lower leg brace.

Align the lower leg brace & screws with the pre-drilled holes in the two corner posts. Tighten screws firmly but do not fully tighten.

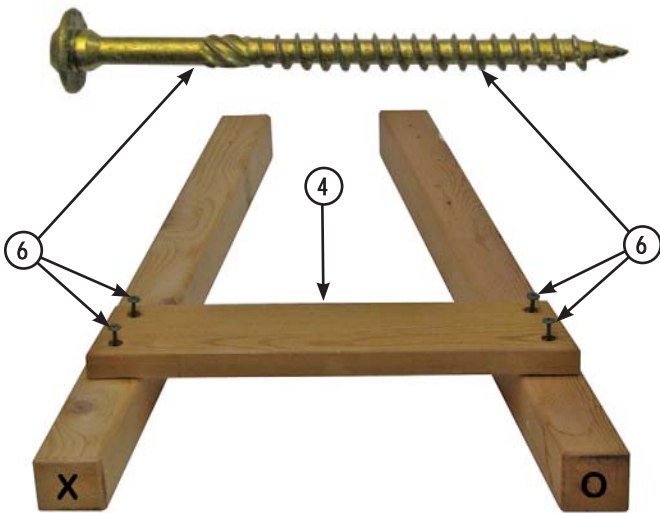


#### 5 Side Brace Installation

Install four 5/16" x 4" screws (Item 6) in the pre-drilled holes of the 2" x 6" x 38" side brace assembly (Item 3).

Install the side brace as shown. Align the side brace & screws with the pre-drilled holes in the two corner posts. Tighten screws firmly but do not fully tighten.

Repeat steps 2-4 for the other leg assembly.

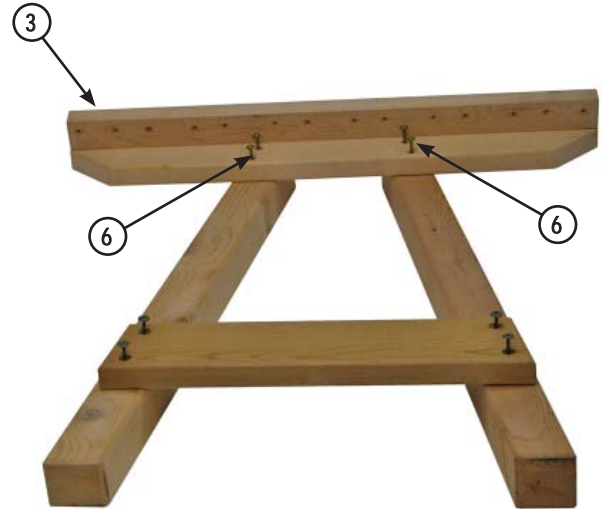


#### 6 Lower Leg Brace Assembly Continued

Place one of the leg assemblies on the ground with the lower leg brace & side brace facing down (as shown).

Install four 5/16" x 4" screws (Item 6) in the pre-drilled holes of a 2" x 6" x 24-1/2" lower leg brace (Item 4).

Align the lower leg brace & screws with the pre-drilled holes in the corner post. Tighten screws firmly but do not fully tighten.

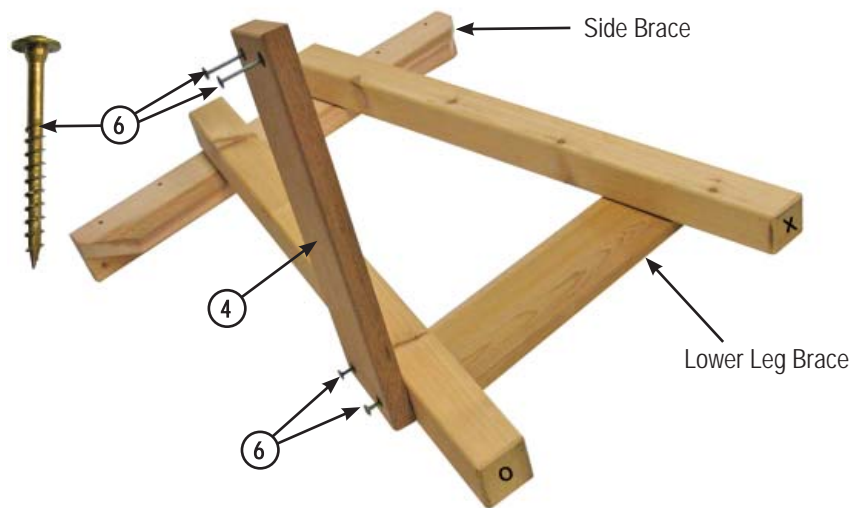

Continued


## 7 Leg Assemblies

Place the leg assemblies on the ground (as shown).

Rotate the leg assembly shown on the right up.

Align the lower leg brace (Item 4) and screws (Item 8) with the pre-drilled holes of the leg assembly on the right.

Tighten screws firmly but do not fully tighten.

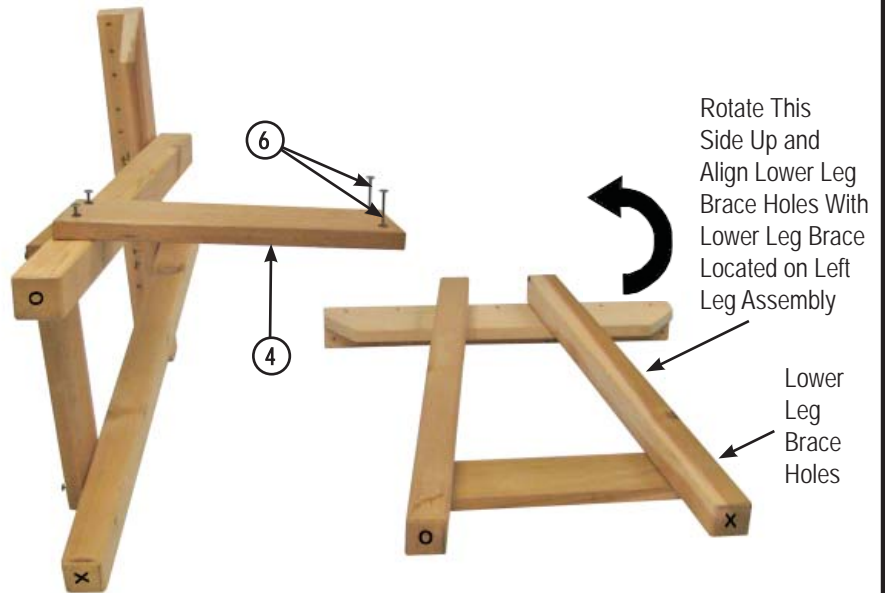


## 8 Final Lower Leg Brace Assembly

Stand the leg assemblies up (as shown).

Locate the one remaining 2" x 6" x 24-1/2" lower leg brace (Item 6). Install four 5/16" x 4" screws (Item 6) in the pre-drilled holes of the lower leg brace.

Align the lower leg brace and screws with the pre-drilled holes of the leg assemblies.

Tighten screws firmly but do not fully tighten

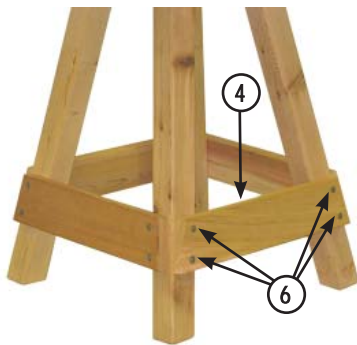


## 9 Upper Leg Brace Assembly

Locate the 2' x 6" x 15" upper leg brace (Item 5). Install four 5/16" x 4" screws (Item 6) in the pre-drilled holes of the upper leg brace.

Align the upper leg brace and screws with the pre-drilled holes of the leg assemblies.

Tighten screws firmly but do not fully tighten.

Repeat procedure on opposite side with the one remaining upper leg brace.

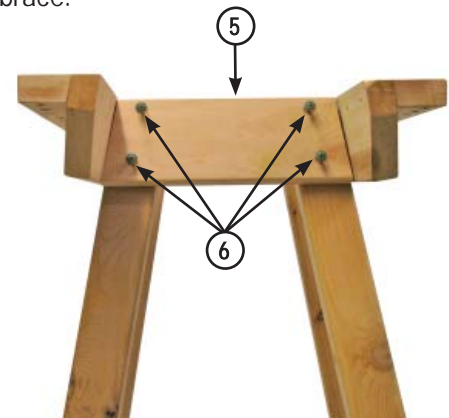


Continued

## 10 Side Brace Marking

Measure and place a mark at the center of the side brace (Item 3) (approximately 18-7/8" from the end of the side brace).


Repeat procedure on side brace on opposite side of assembly.

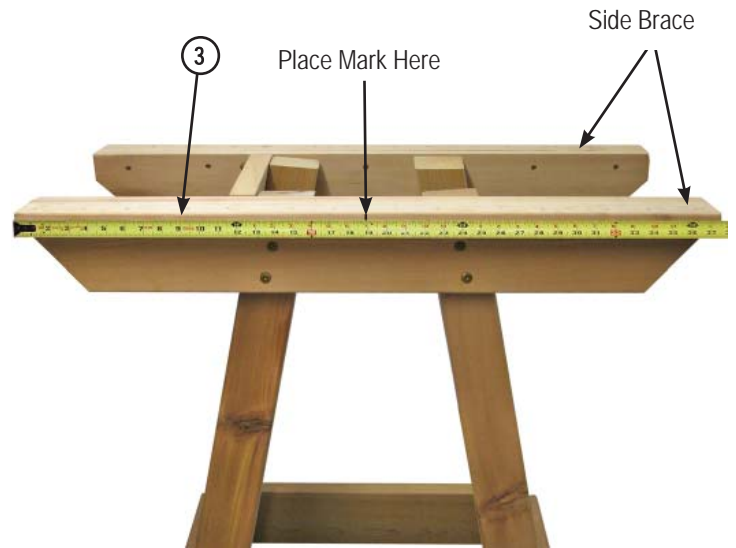

## 11 Table Top Center Panel Marking

Locate the 2" x 6" x 59" table top center panel w/hole (Item 9). Measure 9" from the end of the panel and place a mark. Then measure across the panel and place a mark at the center of the panel where the first mark was made.

Repeat procedure at the other end of table top center panel w/hole.

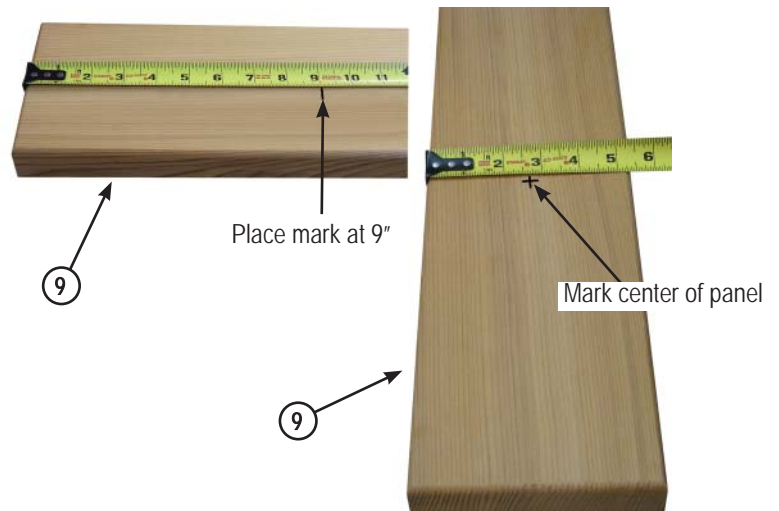

Continued


## 12 Table Top Center Panel Assembly

Align the center mark of the table top center panel w/hole (Item 9) with the previous mark on the on the side brace (Item 3). Move the center panel w/hole in or out until the 9" mark on the table top center panel w/hole is flush with the outside edge of the side brace.

Align the opposite end of table top center panel w/hole, with the mark on the other side brace.

NOTE: When both ends of the table top center panel w/hole are aligned, hold down on the table top center panel w/hole and install the two 5/16" x 2-1/2" screws (Item 7) into the pre-drilled holes on each side brace and tighten screws into the table top center panel w/hole.

NOTE: DO NOT over-tighten screws. Over-tightening the screws will cause the screws to penetrate through the table top panels.

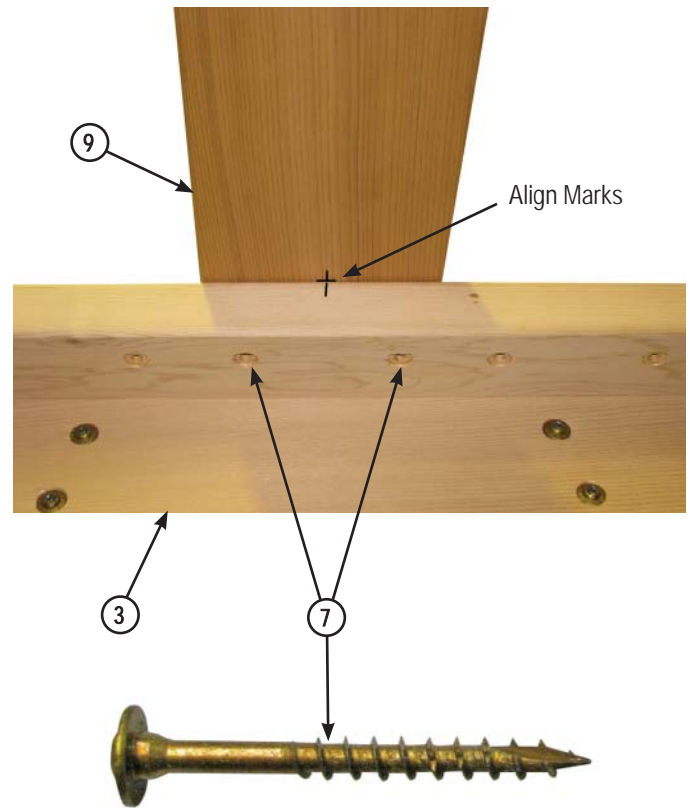


## 13 Table Top Panel Assembly

Place a 2" x 6" x 59" table top panel (Item 8) (as shown) and align the ends of the table top panel with the table top center panel w/hole (Item 9).

Place the table top panel spacer (supplied with kit) between table top center panel w/hole and the table top panel. Install screws into the table top panel, at both ends. (See step 12 for screw installation into table top panels).

Remove the table top panel spacer and repeat step 13 for the remaining table top panels.

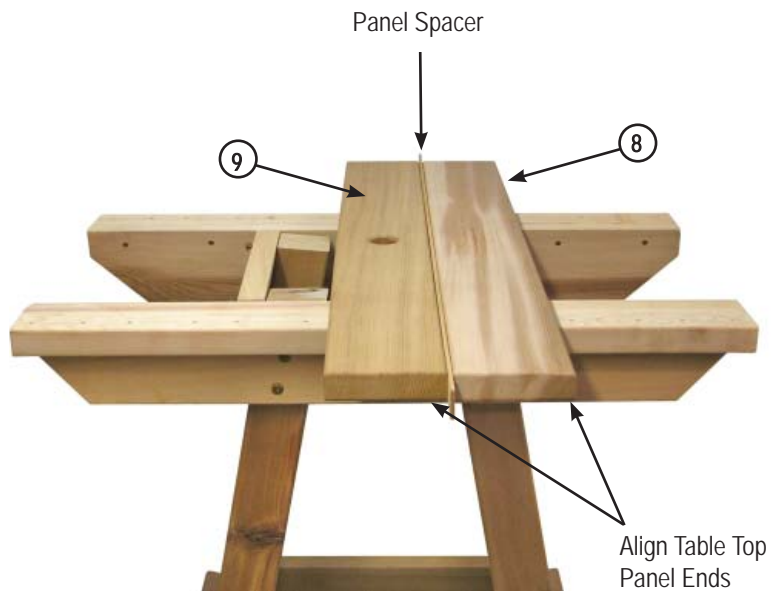

Continued

## 14 Final Picnic Table Bar Top Assembly

Move the table assembly to the desired location (on the deck or in the yard). Verify that all four legs are making contact with the ground.

Completely tighten all screws on the lower leg braces.

Adjust the table top side to side and back to front until the table top is level. Completely tighten all screws on the side braces and upper leg braces.

