


1 Parts Identification

SAC 24-45

Stack matching pieces in piles. Using the parts list, locate and count the individual pieces and verify that you have received the correct number of pieces.

If any pieces are missing or replacement parts are required, contact Gronomics at 1-855-299-6727.

NOTE: It is recommended to place a protective layer between the ground and the pieces during assembly. This will help prevent damage to the pieces.

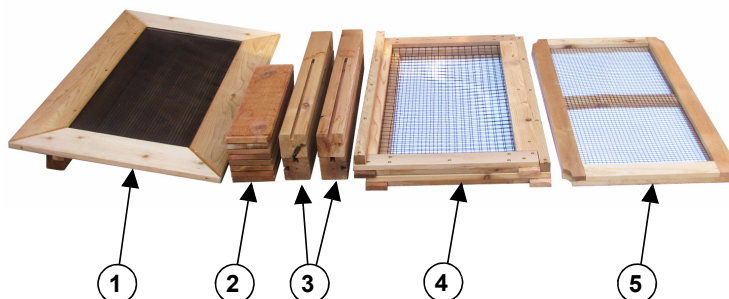

Parts List				Product Care and Maintenance
ITEM	QTY.	PART #	DESCRIPTION	<p>Western Red Cedar will turn a weathered grey if left unfinished. Although no finish is required for cedar when used outdoors, a natural oil finish applied regularly will help maintain the beauty and minimize cracking and drying. It is recommended to use Gronomics Garden Bed Oil (Item# GBO-1Q), a non-toxic, food safe finish that is very easy to apply.</p> <p>Apply oil when air and wind temperatures are between 50-90 degrees. Avoid applying in direct sunlight.</p>
1	1	TL 2746	Top Lid, 27" x 46"	
2	8	R2100	Side Rail, 5/8" x 5-3/8" x 21"	
3	4	3200H	Corner Post, 4" x 4" x 32" w/21-3/4" dovetail depth	
4	2	SPC4021	Screen Panel w/cleat 40" x 21-1/2"	
5	1	BSP4018	Bottom Screen Panel w/4 notched corners 20-3/8" x 40-3/4"	


Packaged & Inspected by:		Date:	
--------------------------	--	-------	--

Continued

2 Corner Post / Screen Side Assembly


NOTE: Assemble the solar assist composter on a level surface and keep posts and parts square when assembling.

Stand two 4" x 4" x 32" corner posts (Item 3) upright with slots facing you and with slots facing each other. Install a 40" x 21-1/2" screen panel w/cleat (Item 4) (cleat facing you) into the slots and slide down.

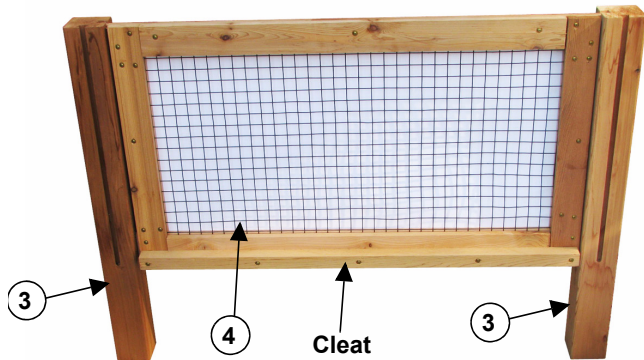

4 Side Rail Assembly Continued


Install remaining 5/8" x 5-3/8" x 21" side rails (Item 2).

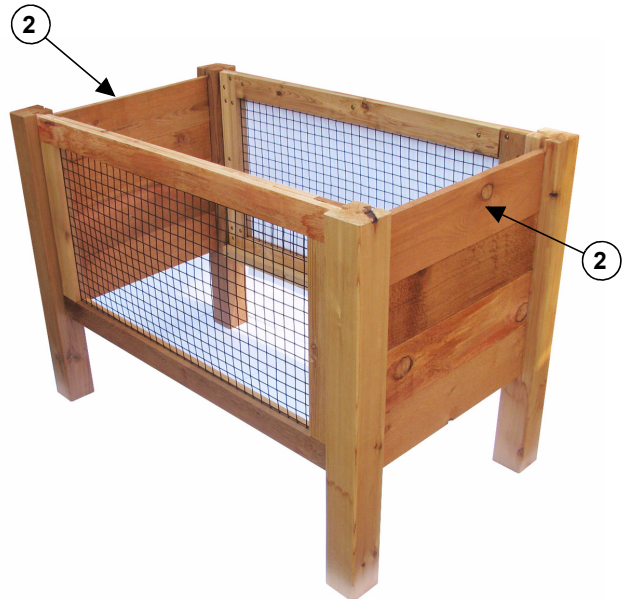

3 Side Rail Assembly


Repeat step 2 with the remaining 4" x 4" x 32" corner posts (Item 3) and 40" x 21-1/2" screen panel w/cleat (Item 4).

Install a 5/8" x 5-3/8" x 21" side rail (Item 2) on each side into the slots and slide down.

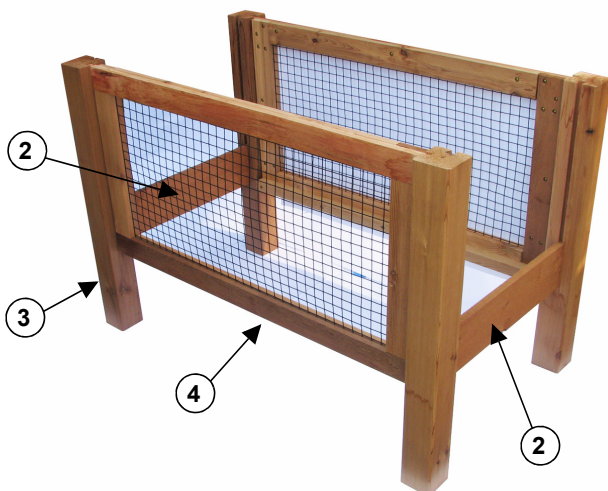

5 Bottom Screen Panel Assembly

Install the 20-3/8" x 40-3/4" bottom screen panel (Item 5), with the screw heads facing down by resting it on the cleats of the 40" x 21-1/2" screen panels w/ cleats (Item 4).

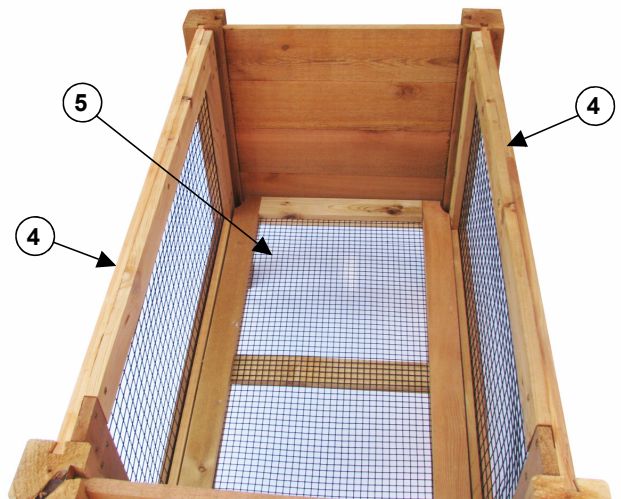

Continued

6 Top Lid Assembly

Install the 27" x 46" top lid, (Item 1) on top of the composter. The lid will rest on top of the composter when raised.

