


### 1 Parts Identification

SAC 36-45

Stack matching pieces in piles. Using the parts list, locate and count the individual pieces and verify that you have received the correct number of pieces.

If any pieces are missing or replacement parts are required, contact Gronomics at 1-855-299-6727.

NOTE: It is recommended to place a protective layer between the ground and the pieces during assembly. This will help prevent damage to the pieces.

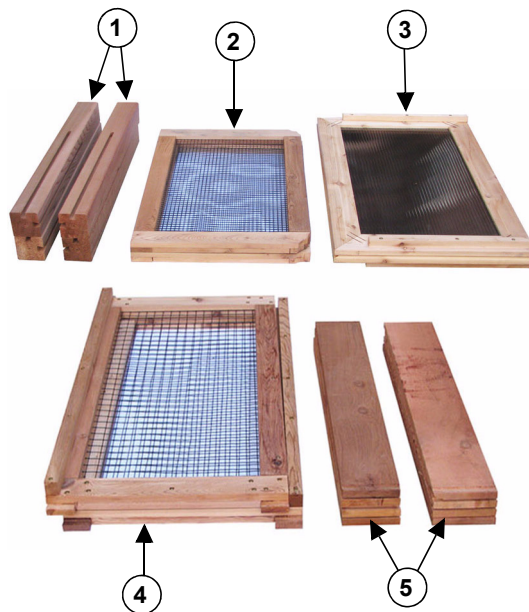

Parts List				Product Care and Maintenance
ITEM	QTY.	PART #	DESCRIPTION	<p>Western Red Cedar will turn a weathered grey if left unfinished. Although no finish is required for cedar when used outdoors, a natural oil finish applied regularly will help maintain the beauty and minimize cracking and drying. It is recommended to use <b>Gronomics Garden Bed Oil (Item# GBO-1Q)</b>, a non-toxic, food safe finish that is very easy to apply.</p> <p>Apply oil when air and wind temperatures are between 50-90 degrees. Avoid applying in direct sunlight.</p>
1	4	3200H	Corner Post, 4" x 4" x 32" w/21-3/4" dove-tail depth	
2	2	BSP3058	Bottom Screen Panel w/2 notched corners 20-5/8" x 30-5/8"	
3	1	FTP4637	Folding Top Lid, 46" x 37"	
4	2	SPC4021	Screen Panel w/cleat, 40" x 21-1/2"	
5	8	R3100	Side Rail, 5/8" x 5-1/2" x 31"	

Packaged & Inspected by:


Date:

Continued

## 2 Corner Post / Screen Panel Assembly

**NOTE:** Assemble the composter on a level surface and keep posts and parts square when assembling.

Stand two 4" x 4" x 32" corner posts (Item 1) upright with slots facing you and with slots facing each other. Install a 40" x 21-1/2" screen panel w/cleat (Item 4) (cleat facing you) into the slots and slide down.

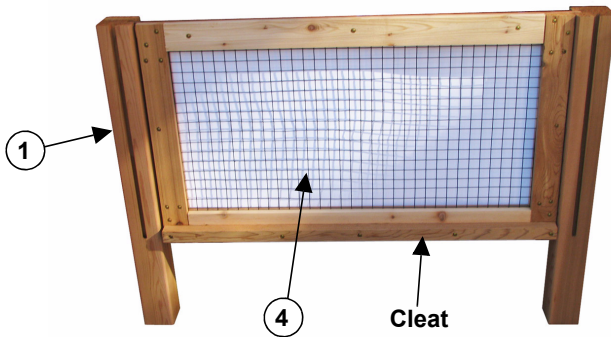

## 4 Side Rail Assembly Continued


Install remaining 5/8" x 5-1/2" x 31" side rails (Item 5).



## 3 Side Rail Assembly


Repeat step 2 with the remaining 4" x 4" x 32" corner posts (Item 1) and 40" x 21-1/2" screen panel with cleat (Item 4).

Install a 5/8" x 5-1/2" x 31" side rail (Item 5) on each side into the slots and slide down.

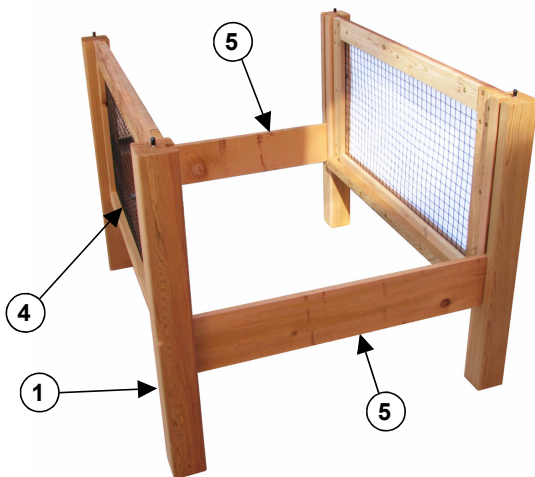

## 5 Bottom Screen Panel Assembly

Install the two 20-5/8" x 30-5/8" bottom screen panels (Item 2), with the screw heads facing down and notched corners toward the corner posts. Rest the bottom screen panels on the cleats of the screen panels w/cleats (Item 4).

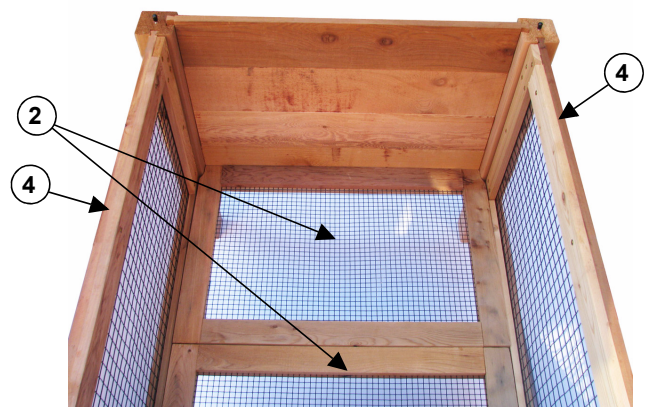

Continued

**6****Folding Top Lid Assembly**

Install the 46" x 37" folding top lid (Item 3) on top of the composter.

