

1


Parts Identification Box 1

Item #: EPB 24-82
Item #: EPB 24-82S

Stack matching pieces in piles.
Using the parts list, locate and
count the individual pieces and
verify that you have received the
correct number of pieces.

If any pieces are missing or
replacement parts are required,
contact Gronomics at 1-855-299-
6727.

NOTE: Ground preparation is
optional, however we recommend
leveling area under frame of
product, or place product directly
on a flat level surface before
filling with soil.

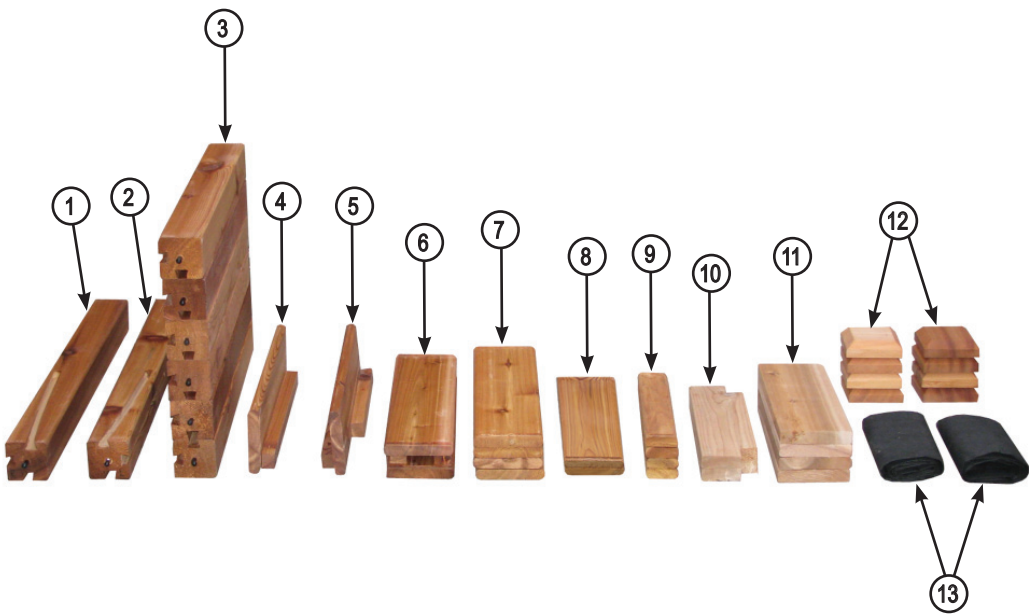

Parts List Box 1 of 2			
ITEM	QTY.	PART #	DESCRIPTION
1	1	7003-Lt	Three Sided Dovetail Corner Post (Left) 4" x 4" x 36"
2	1	7003-Rt	Three Sided Dovetail Corner Post (Right) 4" x 4" x 36" Post w/13"
3	6	7009	Dovetail Depth 4" x 4" x 30"
4	1	7004-Rt	Side Rail w/Double Cleat (Right) 21" x 5-1/2" x 1"
5	1	7004-Lt	Side Rail w/Double Cleat (Left) 21" x 5-1/2" x 1"
6	2	2102	Side Rail w/Cleat 21" x 5-1/2" x 1"
7	4	2100	Side Rail 21" x 5-1/2" x 1"
8	2	1450	Side Rail 14-1/2" x 5-1/2" x 1"
9	4	1451	Narrow Center Side Rail 14-1/2" x 2-1/2" x 1"
10	2	1538NR	Corner Notched Ripped Bottom Board 15-3/8" x 4-1/2" x 1"
11	4	1538	Bottom Board 15-3/8" x 5-1/2" x 1"
12	8	4545	Post Cap 4-5/8" x 4-5/8" x 1-1/2"
13	2	FL3622	Fabric Liner 36" x 22"


Packaged & Inspected by:		Date:	
--------------------------	--	-------	--

Continued

Using the parts list, locate and count the individual pieces and verify that you have received the correct number of pieces.

If any pieces are missing or replacement parts are required, contact Gronomics at 1-855-299-6727.

NOTE: It is recommend when to place a protective layer between the ground and the pieces during assembly. This will help prevent damage to the pieces.

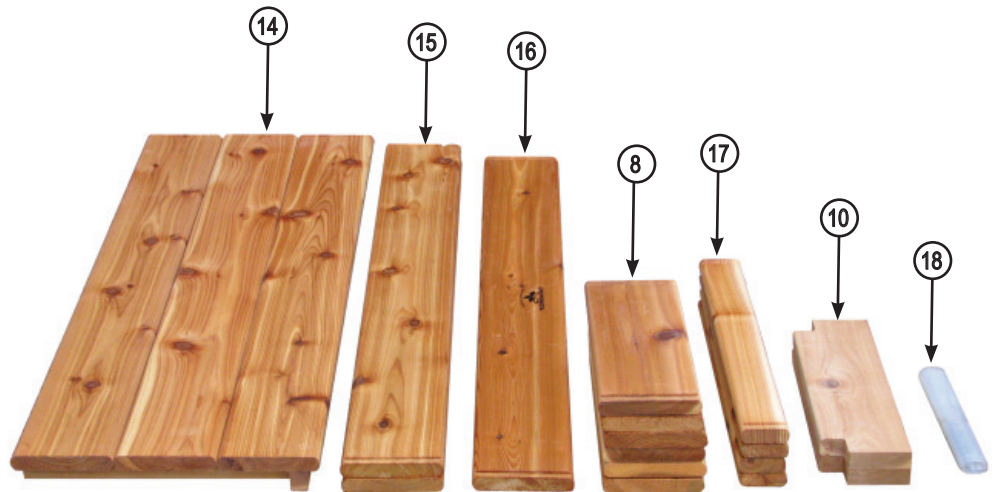

Parts List Box 2 of 2

ITEM	QTY.	PART #	DESCRIPTION
14	1	7110	Planter Bench (pre-assembled)
15	2	4501	Side Rail 45 x 5-1/2" x 1"
16	1	4501L	Side Rail w/ Logo 45 x 5-1/2" x 1"
8	6	1450	Side Rail 14-1/2" x 5-1/2" x 1"
17	4	7006	Narrow Center Side Rail 21" x 2-1/2" x 1"
10	2	1551	Corner Notched Bottom Board 15-1/2" x 4-1/2" x
18	6	R410-318ZY	1" 10 x 3-1/8 R4 GRK use Torx T15

Product Care & Maintenance

Western Red Cedar will turn a weathered grey if left unfinished. Although no finish is required for cedar products when used outdoors, a natural oil finish applied regularly will help maintain the beauty and minimize cracking and drying. It is recommended to use **Gronomics Garden Bed Oil (Item # GBO-1Q)**, a non-toxic, food safe finish that is very easy to apply.

Continued

3


Planter Bench Backrest Assembly

NOTE: The posts slots must be positioned as shown.

Lay the 4" x 4" x 36" three sided dovetail corner post (left) (Item 1) on the ground (as shown).

Lay the 4" x 4" x 36" three sided dovetail corner post (right) (Item 2) on the ground (as shown).

Locate a 45" x 5-1/2" side rail (Item 15). Install the side rail into the curved dovetail slots and slide to the bottom of the slots.

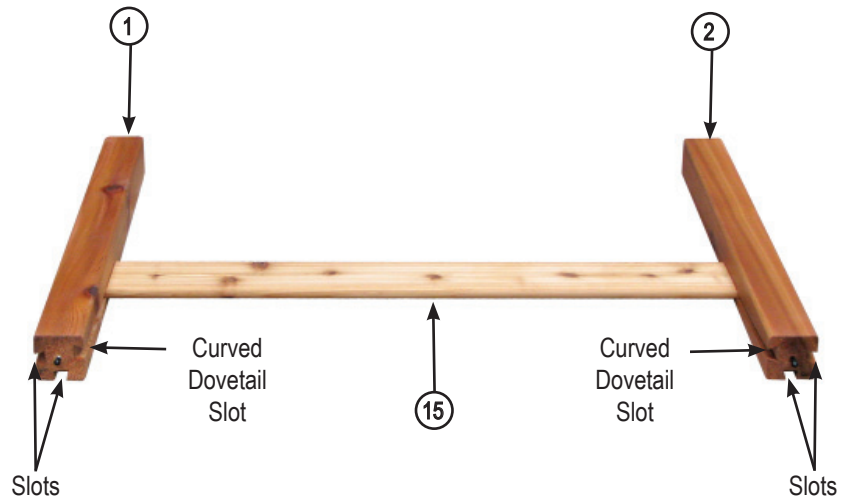


4

Planter Bench Backrest Assembly Continued

Install the remaining 45" x 5-1/2" side rail (Item 15) into the slots and slide down.

Locate the 45" x 5-1/2" side rail w/Logo (Item 16). Install the side rail (Logo facing down) into the slots and slide to the bottom of the slots.

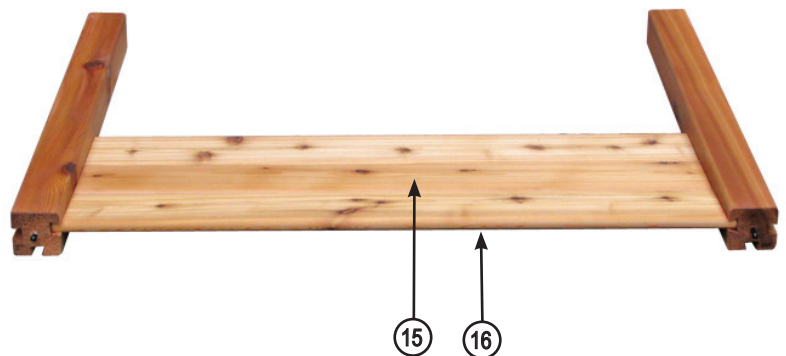

Continued

5

Planter Bench / Planter Box Assembly

Stand the backrest assembly up (as shown). The backrest should be slanted out at the top.

Locate a 4" x 4" x 30" post (Item 3). Stand the post up with slot facing out and slot facing the backrest assembly.

Install the 21" x 5-1/2" side rail w/double cleat (left) (Item 5) (cleats located at the bottom) into the slots on the posts and slide down to the bottom of the slots.



6

Planter Bench / Planter Box Assembly Continued

Locate a 4" x 4" x 30" post (Item 3). Stand the post up with slot facing out and slot facing the backrest assembly.

Install the 21" x 5-1/2" side rail w/double cleat (right) (Item 4) (cleats located at the bottom) into the slots on the posts and slide down to the bottom of the slots.



Continued

7

Planter Box Assembly

Stand a 4" x 4" x 30" post (Item 3) up with slot facing the 36" post and slot facing you.

Install the 14-1/2" x 5-1/2" side rail (Item 8) into the slots on the posts and slide down to the bottom of the slots.




8

Planter Box Assembly Continued

Stand a 4" x 4" x 30" post (Item 3) up with slots facing each post.

Install the 14-1/2" x 5-1/2" side rail w/cleat (Item 6) (cleat located at the bottom) into the slots on the posts and slide down to the bottom of the slots.

Install the 14-1/2" x 5-1/2" side rail (Item 8) into the slots on the posts and slide down to the bottom of the slots.

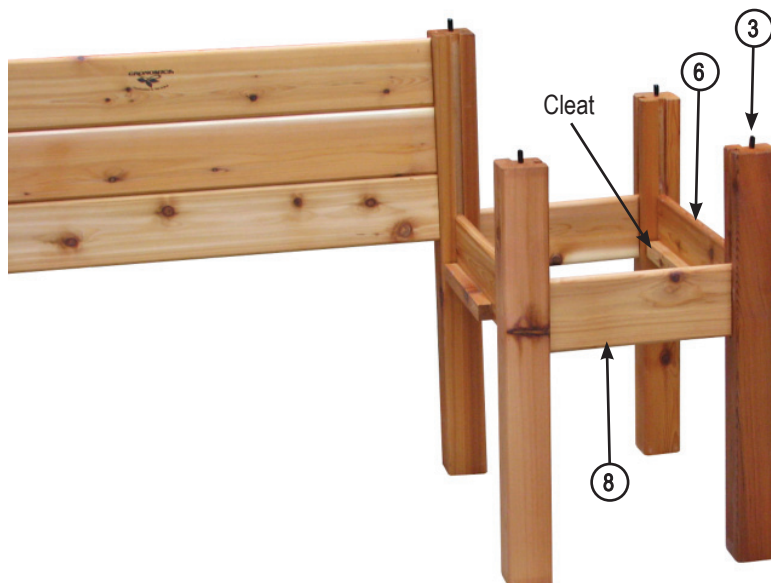


Continued

9

Planter Box Assembly Continued

Install the 14-1/2" x 2-1/2" narrow center side rails (Item 9) into the slots on the posts and slide down.

Install the 21" x 2-1/2" narrow center side rails (Item 17) into the slots on the posts and slide down.

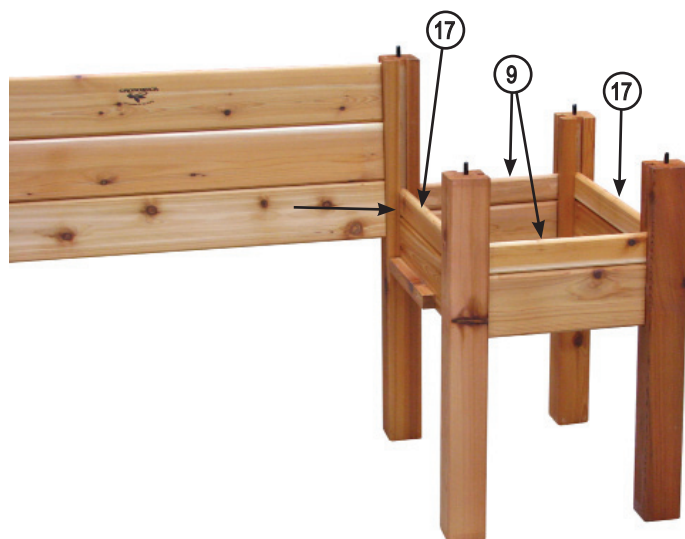

10

Planter Box Assembly Continued

Install the 14-1/2" x 5-1/2" side rails (Item 8) into the slots on the posts and slide down.


Install the 21" x 5-1/2" side rails (Item 7) into the slots on the posts and slide down.



Continued

11 Corner Notched Bottom Board Assembly

Place one 15-1/2" x 4-1/2" corner notched bottom board (Item 10) on each end of the planter box.

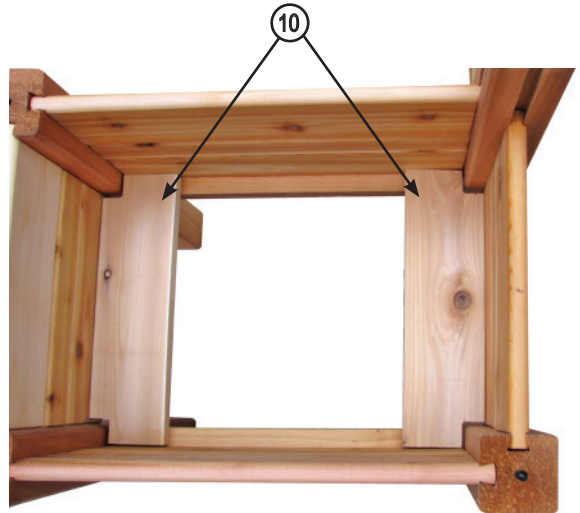


12 Bottom Board and Fabric Installation

Place two 15" x 5-1/2" bottom boards (Item 11) into the planter box. (Gap boards evenly to allow for water drainage).

Repeat steps 7 - 12 for planter box on opposite end of planter bench backrest.

Locate the two pieces of fabric liner. Place one piece in the bottom of each planter box.

Soil Capacity: 4.1 Cubic Feet

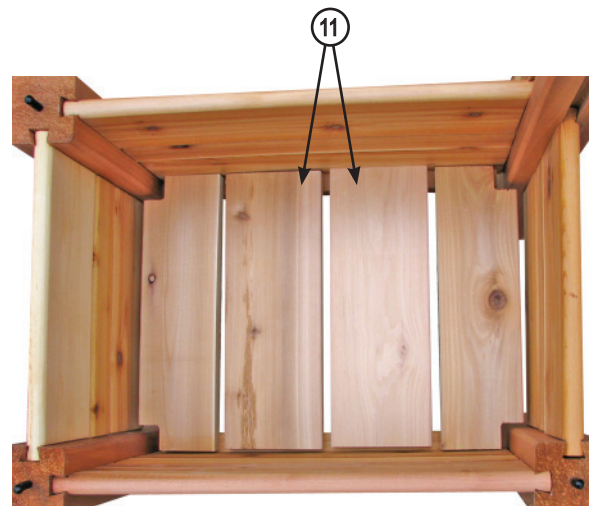

Continued

13 Planter Bench Assembly 5


Place the planter bench (Item 14) onto the side rail w/double cleats (as shown).

Install the GRK R4 screws (Item 18) into the pre-drilled holes at each end of the planter bench and tighten.



14 Post Cap Assembly

Remove the rubber cap from the post stud.

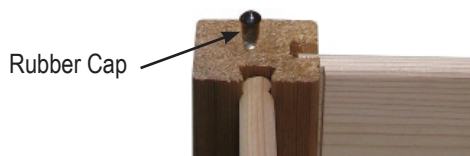

Align the hole of the 4" x 4" post cap (Item 12) with stud and tighten until the cap makes contact with the post.

NOTE: Do not overtighten.

Repeat procedure for all posts.

