


### 1 Parts Identification

Stack matching pieces in piles. Using the parts list, locate and count the individual pieces and verify that you have received the correct number of pieces.

If any pieces are missing or replacement parts are required, contact Gronomics at 1-855-299-6727.

NOTE: Ground preparation is optional, however we recommend leveling area under frame of product, or place product directly on a flat level surface before filling with soil.

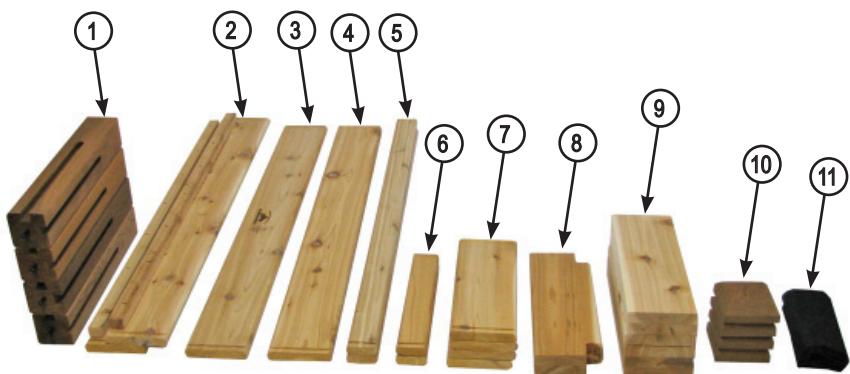

Item #: PB 18-48

Item #: PB 18-48S

### Parts List

ITEM	QTY.	PART #	Description	Product Care and Maintenance
1	4	1900P	Corner Post, 4" x 4" x 19" W/ 2 DOVETAILED SIDES	Western Red Cedar will turn a weathered grey if left unfinished. Although no finish is required for cedar when used outdoors, a natural oil finish applied regularly will help maintain the beauty and minimize cracking and drying. It is recommended to use <b>Gronomics Garden Bed Oil</b> (Item # GBO-1Q), a non-toxic, food safe finish that is very easy to apply. Apply Oil when air and wind temperatures are between 50-90degrees. Avoid applying in direct sunlight.
2	2	4502T	Side Rail w/Cleat, 45" x 5-1/2" x 7/8"	
3	1	4500TL	Side Rail w/Logo, 45" x 5-1/2" x 7/8"	
4	1	4500T	Side Rail, 45" x 5-1/2" x 7/8"	
5	2	4501T	Narrow Center Side Rail, 45-1/2" x 2-1/2" x 7/8"	
6	2	1451T	Narrow Center Side Rail, 14-1/2" x 2-1/2" x 7/8"	
7	4	1450T	Side Rail, 14-1/2" x 5-1/2" x 7/8"	
8	2	1538N	Corner Notched Bottom Board, 15" x 5-3/8" x 1"	
9	6	1538	Bottom Board, 15-3/8" x 5-1/2" x 1"	
10	4	4545	Post Cap, 4-5/8" x 4-5/8" x 1-1/2"	
11	1	FL3652	Fabric Liner, 36"x 52"	


### 2 Side Rail Assembly

Stand two 4" x 4" x 19" corner posts (Item 1) upright with slots facing each post and slots facing you.

Locate a 14-1/2" x 5-1/2" side rail w/cleat (Item 2). With cleat located at the bottom and facing you, install side rail w/cleat into the slots and slide down to the bottom of the slots.

Repeat procedure for the two remaining 4" x 4" x 19" corner posts and 14-1/2" x 5-1/2" side rail w/cleat.

(Soil depth option: Cleats located as shown will provide a soil depth of approximately 10". Reverse side rail w/cleat installation, cleats located at top, if a soil depth of approximately 6" is desired).

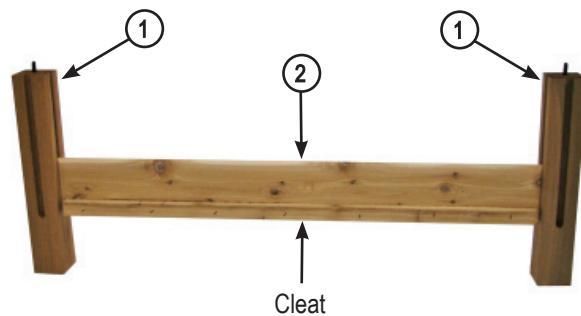


Packaged & Inspected by:

Date:

Continued

### 3 End Rail Assembly


Install the two 14-1/2" x 5-1/2" side rails (Item 7) into the slots and slide to the bottom of the slots.

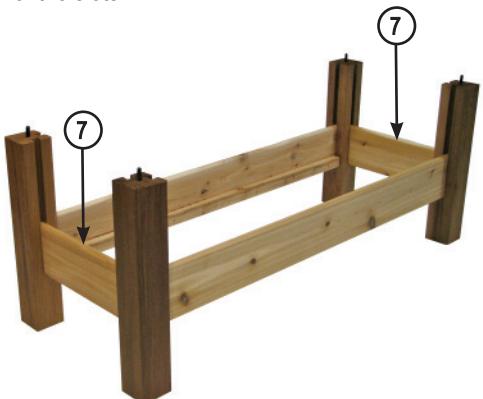

### 4 Narrow Center Side Rail Assembly

Install the two 45" x 2-1/2" narrow center side rails (Item 5) into the slots and slide down.


Install the two 14-1/2" x 2-1/2" narrow center side rails (Item 6) into the slots and slide down.

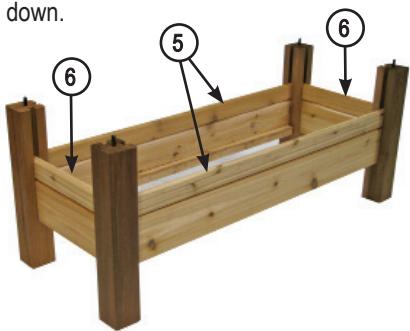

### 5 Final Side Rail Assembly

Install the 45" x 5-1/2" side rail w/logo (Item 3) and 45" x 5-1/2" side rail (Item 4) and slide down.

Install the remaining 14-1/2" x 5-1/2" side rails (Item 7) into the slots and slide down.

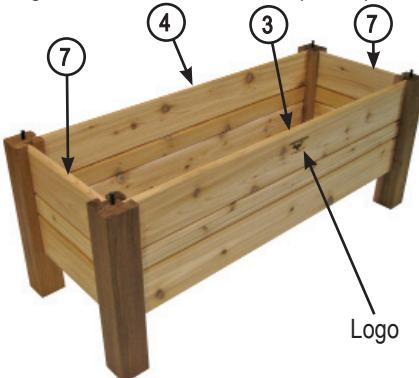

### 6 Bottom Board and Fabric Installation

Place one 15" x 5-1/2" x corner notched bottom board (Item 8) on each end of the planter box.

Place six 15" x 5-1/2" bottom boards (Item 9) into the planter box. (Gap boards evenly to allow for water drainage).

Install fabric liner into the planter box.

Soil Capacity: 4.3 Cubic Feet



### 7 Post Cap Assembly

Remove the rubber cap from the corner posts studs.

Align the hole of the 4" x 4" post cap (Item 10) with stud and tighten until the cap makes contact with the post.

NOTE: Do not overtighten.

Repeat procedure on all posts.

