


1 Parts Identification Box 1

PBWS 24-48

Stack matching pieces in piles. Using the parts list, locate and count the individual pieces and verify that you have received the correct number of pieces.

If any pieces are missing or replacement parts are required, contact Gronomics at 1-855-299-6727.

NOTE: It is recommended to place a protective layer between the ground and the pieces during assembly. This will help prevent damage to the pieces.

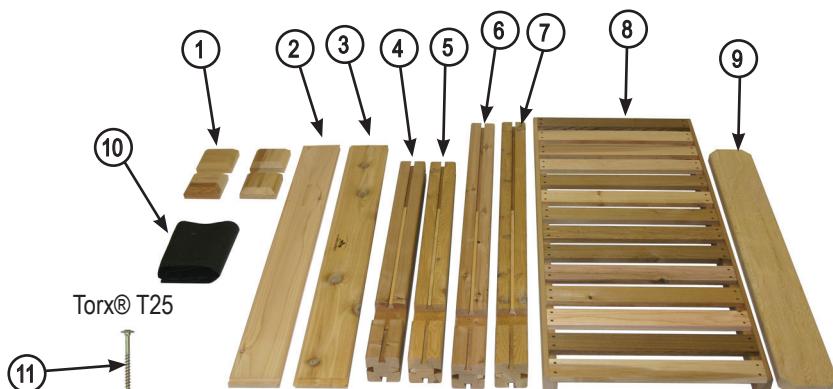

Box 1 of 2

ITEM	QTY.	PART #	DESCRIPTION
1	4	4545	Post Cap, 4-5/8" x 4-5/8" x 1-1/2"
2	1	L4500T	Side Rail, (w/Logo), 45" x 5-1/2" x 7/8"
3	1	TR4500T	Top Rail, (Top Rail for Shelf Board), 45" x 5-1/2" x 7/8"
4	1	3600PBSLF	Corner Post, LF - Left Front, 4" x 4" x 36"
5	1	3600PBSRF	Corner Post, RF - Right Front 4" x 4" x 36"
6	1	4650PBSLR	Corner Post, LR - Left Rear, 4" x 4" x 46-1/2"
7	1	4650PBSRR	Corner Post, RR - Right Rear 4" x 4" x 46-1/2"
8	1	PBSA2150	Shelf, Pre-Assembled, 21-3/4" x 2-1/2" x 50"
9	1	PBSB43	Shelf Board, 43.75" x 5-1/2" x 1-3/8"
10	1	FL3652	Fabric Liner, 36" x 52"
11	8	RSS10-234ZY	Screws, 10 x 2-3/4" GRK

Packaged & Inspected by:

Date:

Continued


2**Parts Identification Box 2**

Remove contents from Box 2 of 2.

Stack matching pieces in piles. Using the parts list, locate and count the individual pieces and verify that you have received the correct number of pieces.

If any pieces are missing or replacement parts are required, contact Gronomics at 1-855-299-6727.

NOTE: It is recommended to place a protective layer between the ground and the pieces during assembly. This will help prevent damage to the pieces.

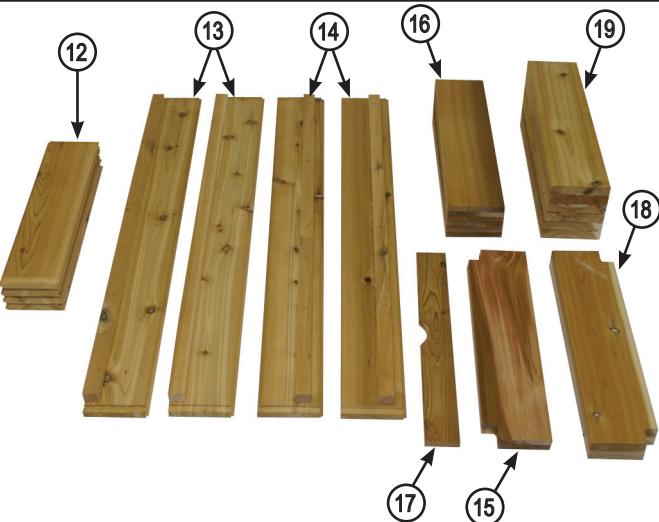**Box 2 of 2**

ITEM	QTY.	PART #	DESCRIPTION
12	4	2100T	Side Rail, 21" x 5-1/2" x 7/8"
13	2	4502TC	Side Rail, w/Bottom Cleat, 45" x 5-1/2" x 7/8"
14	2	4503TC	Side Rail, w/ Top Cleat, 45" x 5-1/2" x 7/8"
15	2	22525TTN	Table Top Notched Board, 22" x 5-1/4" x 5/8"
16	6	22525TTB	Table Top Board, 22" x 5-1/4" x 5/8"
17	1	22275TTF	Table Top Filler Board 22" x 2-3/4" x 5/8"
18	2	2178BN	Bottom Notched Board, 5/4 x 6" x 21-7/8"
19	6	2178BB	Bottom Board, 5/4 x 6" x 21-7/8"

3**Pre-Assembled Shelf Assembly**

Place a 4" x 4" x 46-1/2" LR corner post (Item 6) and 4" x 4" x 46-1/2" RR corner post (Item 7) on the ground.

Place the pre-assembled shelf 21" x 2 1/2 " x 50" (Item 8) into the corner post notches as shown.

LR - Left Rear on Left.


RR - Right Rear on Right

Install the two 10 x 2-3/4" screws (Item 11) through the pre-drilled holes in the shelf at each end.

Repeat procedure for the 4" x 4" x 36" LF corner post (Item 4) and RF corner posts (Item 5) on the opposite side of the shelf.

LF - Left Front on Left.

RF - Right Front on Right.

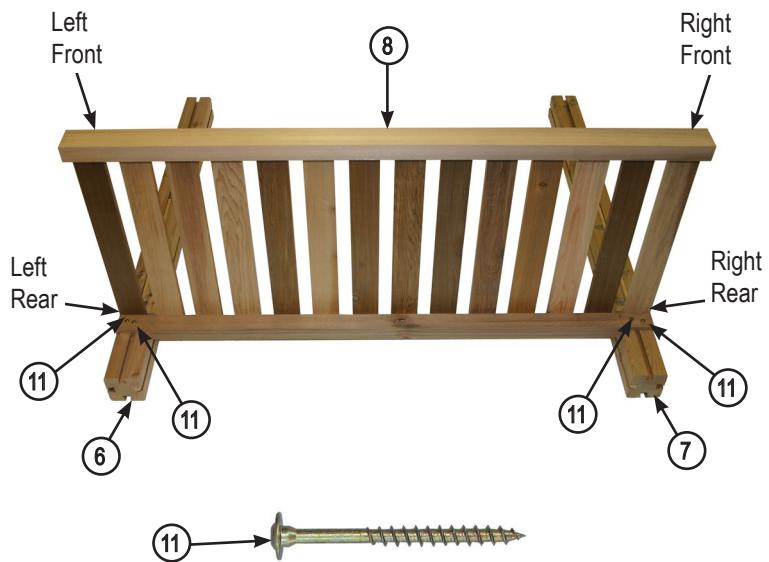

Continued


4**Side Rail w/Cleat Assembly**

Install a 45" x 5-1/2" x 7/8" side rail w/bottom cleat (Item 13) on each side, with the cleat located at the bottom and the cleat facing inward. Slide the side rails w/ bottom cleat between the posts and slide down.

Install the two 21" x 5-1/2" x 7/8" side rails (Item 12) between the posts at each end of the potting bench and slide down.

Install a 45" x 5-1/2" x 7/8" side rail w/top cleat (Item 14) on each side, with the cleat located at the top and the cleat facing inward. Slide the side rails w/top cleat between the posts and slide down.


NOTE: Make sure the boards tongue and grooves fully seat together.

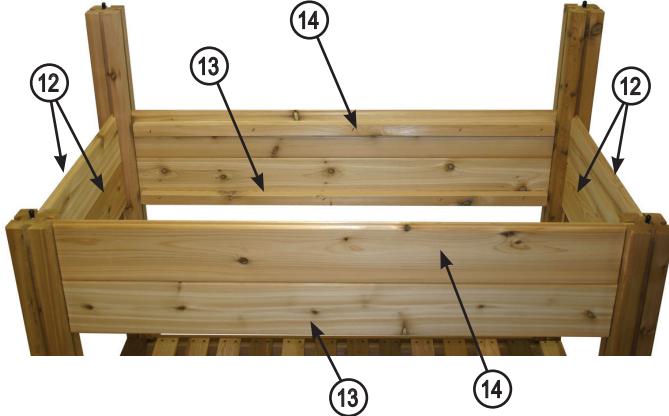**6****Side Rail Assembly**

Install the 45" x 5-1/2" x 7/8" side rail (Item 2) (w/Logo) between the posts and slide down.


Install the 45" x 5-1/2" x 7/8" top rail for shelf board (Item 3) and slide down.

NOTE: Make sure the boards tongue and grooves fully seat together.

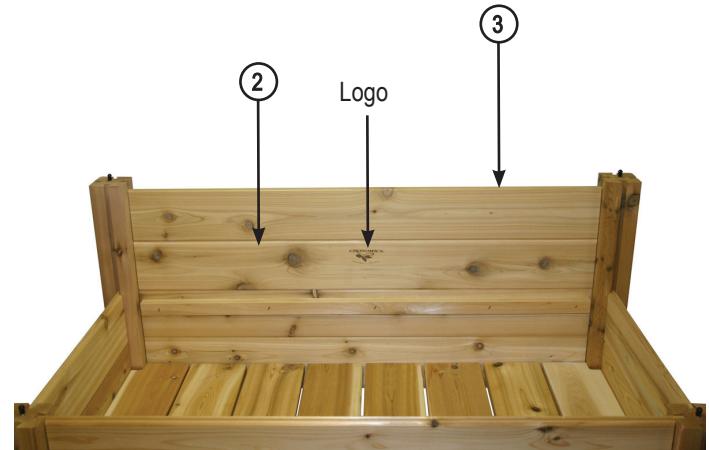
**5****Bottom Board Installation**

Place one 5/4 x 6" x 21-7/8" bottom notched board (Item 18) on each end of the potting bench.

Place six 5/4 x 6" x 21-7/8" bottom boards (Item 17) into potting bench. (Gap boards evenly to allow for water drainage).

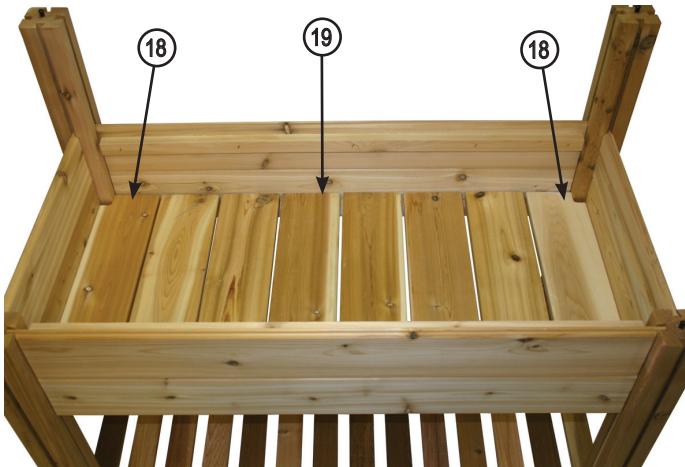**7****Shelf Board Assembly**

Install the 43.75" x 5-1/2" x 1-3/8" shelf board (Item 9) onto the side rail.

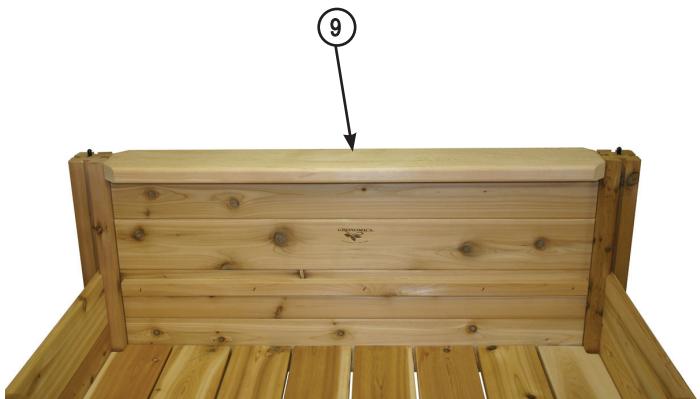

Continued


8**Post Cap Installation**

Remove the rubber cap from the corner posts.

Align the hole of the 4-5/8" x 4-58" x 1-1/2" post cap (Item 1) with stud and tighten until the cap makes contact with the post. Repeat procedure on all corner posts.

NOTE: Do not overtighten.

Rubber Cap

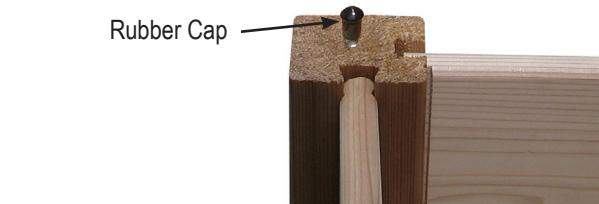

1

Stud

**10****Table Top Board Installation**

Place six 22" x 5-1/4" x 5/8" table top boards (Item 16) onto potting bench.

Place the 22" x 5-1/4" x 5/8" table top filler board (Item 17) onto the potting bench.

17

16

**9****Table Top Notched Board and Fabric Installation**

Place the 36" x 52" fabric liner (Item 10) into the potting bench.

Install the two 22" x 5-1/4" x 5/8" table top notched boards (Item 15) at each end of the potting bench.

