


1 Parts Identification

Item #: ECOGW 30-48 EXT

Stack matching pieces in piles. Using the parts list, locate and count the individual pieces and verify that you have received the correct number of pieces.

If any pieces are missing or replacement parts are required, contact Gronomics at 1-855-299-6727.

NOTE: Ground preparation is optional, however we recommend leveling area under frame of product, or place product directly on a flat level surface before filling with soil.

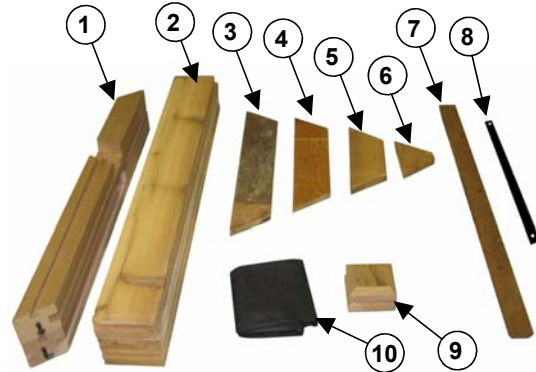

Parts List

Product Care & Maintenance

ITEM	QTY.	PART #	DESCRIPTION
1	2	4125W	Corner Post, 3-1/4" x 3-1/4" x 41-1/4"
2	8	R4500	Front & Back Side Rails, 45" x 5-9/16 x 7/8"
3	1	WER2538	End Side Rails, w/Logo 25-3/16" x 4-1/8"x5/8"
4	1	WER1938	End Side Rails, 19-7/16" x 4-1/8" x 5/8"
5	1	WER1358	End Side Rails, 13-3/4" x 4-1/8" x 5/8"
6	1	WER0775	End Side Rails, 8-1/8" x 4-1/8" x 5/8"
7	1	BCR43	Bottom Center Rail, 43-3/8" x 2-1/2" x 13/16"
8	1	SP1-30	Stiffener Plate
9	2	4545	Post Cap, 4-5/8" x 4-5/8" x 1-1/2"
10	1	FL3652	Fabric Liner, 36" x 52"


Western Red Cedar will turn a weathered grey if left unfinished. Although no finish is required for cedar products when used outdoors, a natural oil finish applied regularly will help maintain the beauty and minimize cracking and drying. It is recommended to use **Gronomics Garden Bed Oil (Item # GBO-1Q)**, a non-toxic, food safe finish that is very easy to apply. Apply Oil when air and wind temperatures are between 50-90 degrees. Avoid applying in direct sunlight.

2 Post Assembly

Place two 3-1/4" x 3-1/4" x 41-1/4" corner posts (Item 1) together as shown.

Repeat procedure for the two remaining corner posts.

Note: It is a snug fit placing the posts together. You may need to use a rubber mallet until corner posts are seated (flush) together

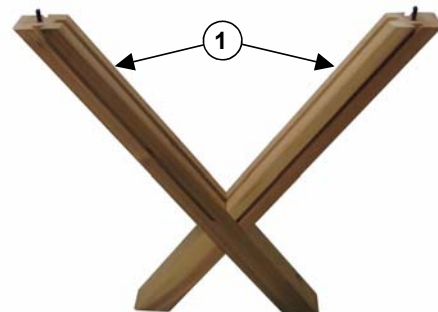

Packaged & Inspected by:

Date:


Continued

3 Side Rail Assembly

Remove the two post caps from the Garden Wedge.

NOTE: The extension kit can be assembled on either end of the Garden Wedge.

Install four 45" x 5-5/8" side rails (Item 2) into the upper part of the slots between the two corner posts and slide down.

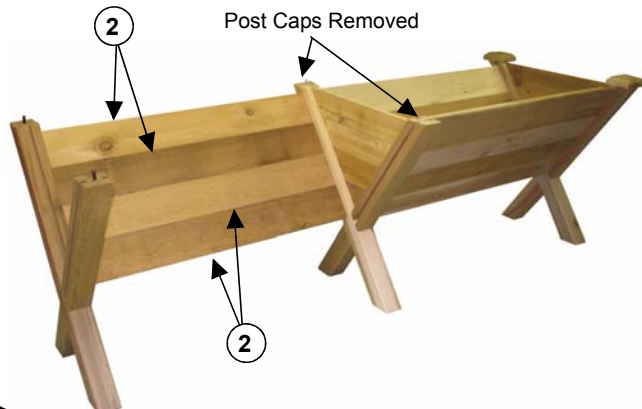

5 Bottom Center Rail Assembly

Install the 43-3/8" x 2-1/2" bottom center rail (Item 7) with the tapered edges of the rail facing down.

Install the fabric liner into the Garden Wedge.

Soil Capacity: 6.5 Cubic Feet




4 End Rail Assembly

Install the four remaining 45" x 5-5/8" side rails (Item 2) into the upper part of the slots between the two corner posts and slide down.

Install the four end side rails (Item 6, 5, 4 & 3) into the upper part of the slots between the two corner posts and slide down.

Remove the rubber caps from the post studs. Install a stiffener plate (Item 8) on the top end rail as shown.

NOTE: May need to lift boards 3,4,5 & 6 slightly by placing fingertips under board 6 to get the stiffener plate in place.

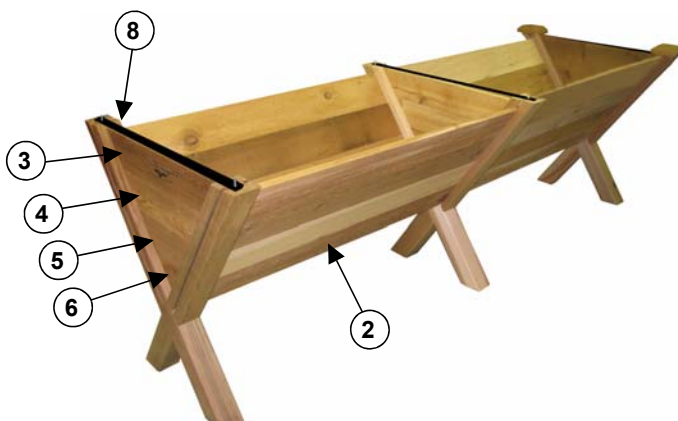

6 Post Cap Assembly

Align the hole of the 4" x 4" post cap (Item 9) with stud and tighten until the post cap makes contact with the post. Do not overtighten.

