


### 1 Parts Identification

MLRRGB 36-36

Stack matching pieces in piles. Using the parts list, locate and count the individual pieces and verify that you have received the correct number of pieces.

If any pieces are missing or replacement parts are required, contact Gronomics at 1-855-299-6727.

NOTE: It is recommended to place a protective layer between the ground and the pieces during assembly. This will help prevent damage to the pieces.

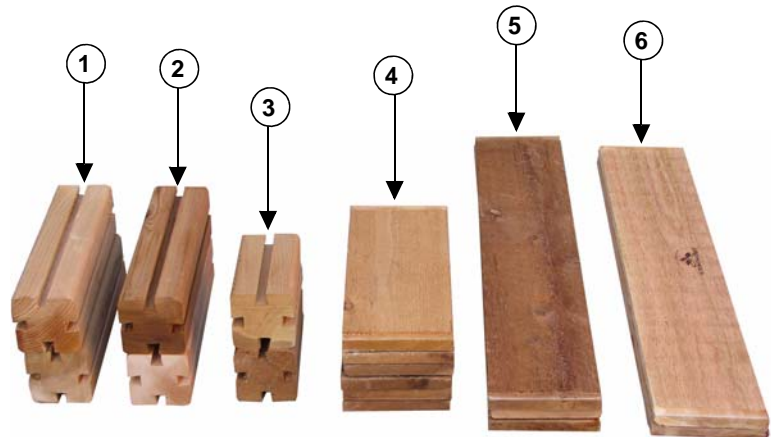


Parts List				Product Care and Maintenance
ITEM	QTY.	PART #	DESCRIPTION	
1	2	R1300	Corner Post, 4" x 4" x 13"	Western Red Cedar will turn a weathered grey if left unfinished. Although no finish is required for cedar when used outdoors, a natural oil finish applied regularly will help maintain the beauty and minimize cracking and drying. It is recommended to use <b>Gronomics Garden Bed Oil (Item# GBO-1Q)</b> , a non-toxic, food safe finish that is very easy to apply.  Apply oil when air and wind temperatures are between 50-90 degrees. Avoid applying in direct sunlight.
2	2	R1300SP	Corner Post, (with spacers) 4" x 4" x 13"	
3	2	R6500	Corner Post, 4" x 4" x 6-1/2"	
4	6	R1450	Side Rail, 14-1/2" x 5-1/2" x 7/8"	
5	3	R3100	Side Rail, 31" x 5-1/2" x 7/8"	
6	1	R3100L	Side Rail, (w/Logo), 31" x 5-1/2" x 7/8"	

### 2 Corner Post and Side Rail Assembly

Stand two 4" x 4" x 13" corner posts (Item 1) upright.

Install a 31" x 5-1/2" x 7/8" side rail (Item 5) between the posts and slide down.

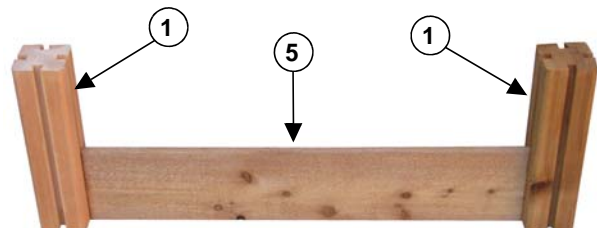

Packaged & Inspected by:		Date:	
--------------------------	--	-------	--


**Continued**

### 3 Side Rail Assembly

Install one 14-1/2" x 5-1/2" x 7/8" side rail (Item 4) at each end of the garden bed and slide down.

Install two 4" x 4" x 13" corner post (with spacer) (Item 2) onto each side rail.


NOTE: Spacer must be located as shown.

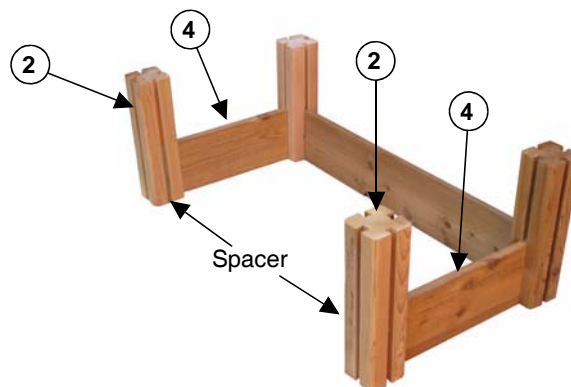

### 4 Side Rail Assembly Continued

Install two 31" x 5-1/2" x 7/8" side rails (Item 5) between the posts and slide down.

Install one 14-1/2" x 5-1/2" x 7/8" side rail (Item 4) at each end of the garden bed and slide down.

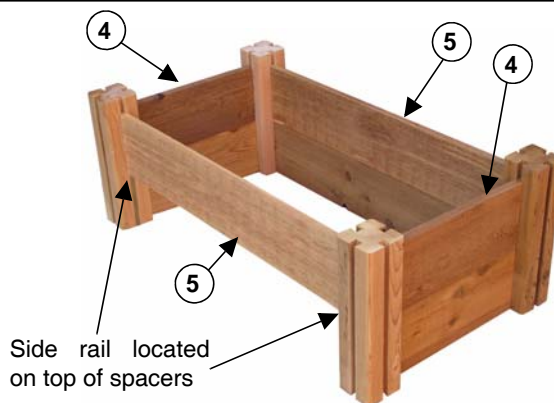

### 5 Lower Level Rail Assembly

Install one 14-1/2" x 5-1/2" x 7/8" side rail (Item 4) at each end of the garden bed and slide down.

Install two 4" x 4" x 6-1/2" corner posts (Item 3) onto each side rail.

Install the 31" x 5-1/2" x 7/8" side rail (w/Logo) (Item 6) between the posts and slide down.

