


### 1 Parts Identification

Item #: MRGW 34-48 EXT

Stack matching pieces in piles. Using the parts list, locate and count the individual pieces and verify that you have received the correct number of pieces.

If any pieces are missing or replacement parts are required, contact Gronomics at 1-855-299-6727.

NOTE: Ground preparation is optional, however we recommend leveling area under frame of product, or place product directly on a flat level surface before filling with soil.

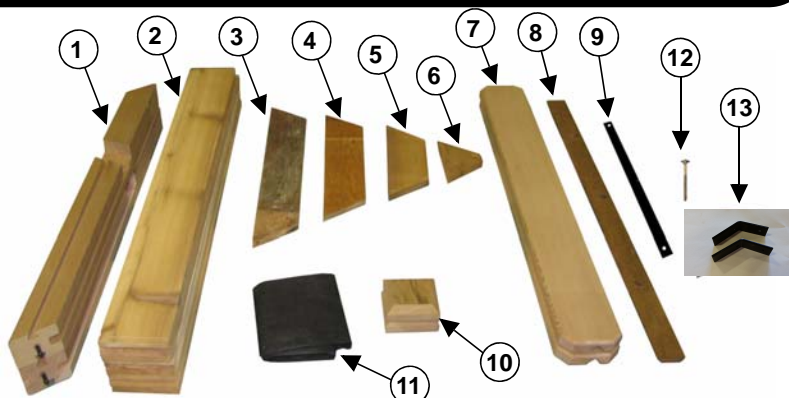

#### Parts List

ITEM	QTY.	PART #	DESCRIPTION
1	2	CP41	Corner Post, 3-1/4" x 3-1/4" x 41-1/4"
2	8	R4501	Front & Back Side Rails, 45" x 5-9/16 x 13/16"
3	1	ES2613L	End Side Rails, 25-3/16" x 4-1/8" x 13/16"
4	1	ES2013	End Side Rails, 19-7/16" x 4-1/8" x 13/16"
5	1	ES1313	End Side Rails, 13-3/4" x 4-1/8" x 13/16"
6	1	ES0713	End Side Rails, 8-1/8" x 4-1/8" x 13/16"
7	2	SH43	Shelves, 43-3/4" x 5-1/2" x 1-3/8"
8	1	BCR43	Bottom Center Rail, 43-3/8" x 2-1/2" x 13/16"
9	1	SP1-30	Stiffener Plate
10	2	R3100	Post Cap, 4-5/8" x 4-5/8" x 1-1/2"
11	1	FL3652	Fabric Liner, 36" x 52"
12	4	CS8-114ZY	GRK Cabinet Screw #8 x 1-1/4" Screws (Torx® T-15)
13	2	WSS5	OPTIONAL: Wedge Shelf Support Braces 5" x 1"

#### Product Care & Maintenance


Western Red Cedar will turn a weathered grey if left unfinished. Although no finish is required for cedar products when used outdoors, a natural oil finish applied regularly will help maintain the beauty and minimize cracking and drying. It is recommended to use **Gronomics Garden Bed Oil (Item # GBO-1Q)**, a non-toxic, food safe finish that is very easy to apply. Apply Oil when air and wind temperatures are between 50-90 degrees. Avoid applying in direct sunlight.

### 2 Post Assembly

Place two 3-1/4" x 3-1/4" x 41-1/4" corner posts (Item 1) together as shown.

Repeat procedure for the two remaining corner posts.

Note: It is a snug fit placing the posts together. You may need to use a rubber mallet until corner posts are seated (flush) together

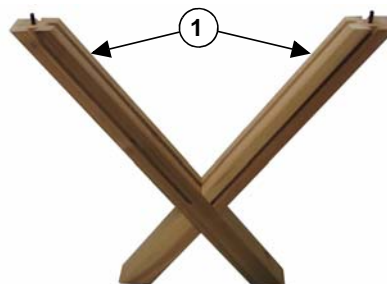

Packaged & Inspected by:

Date:


Continued

### 3 Side Rail Assembly

Remove the two post caps from the Garden Wedge.

NOTE: The extension kit can be assembled on either end of the Garden Wedge.

Install four 45" x 5-5/8" side rails (Item 2) into the upper part of the slots between the two corner posts and slide down.

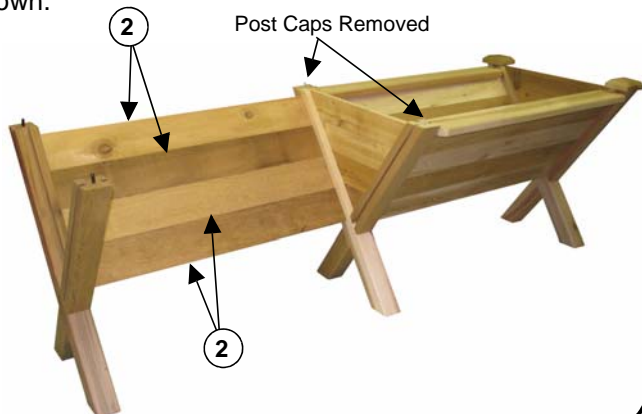


### 4 End Rail Assembly

Install the four remaining 45" x 5-5/8" side rails (Item 2) into the upper part of the slots between the two corner posts and slide down.

Install the four end side rails (Item 6, 5, 4 & 3) into the upper part of the slots between the two corner posts and slide down.

Remove the rubber caps from the post studs. Install a stiffener plate (Item 9) on the top end rail as shown.

NOTE: May need to lift boards 3,4,5 & 6 slightly by placing fingertips under board 6 to get the stiffener plate in place.

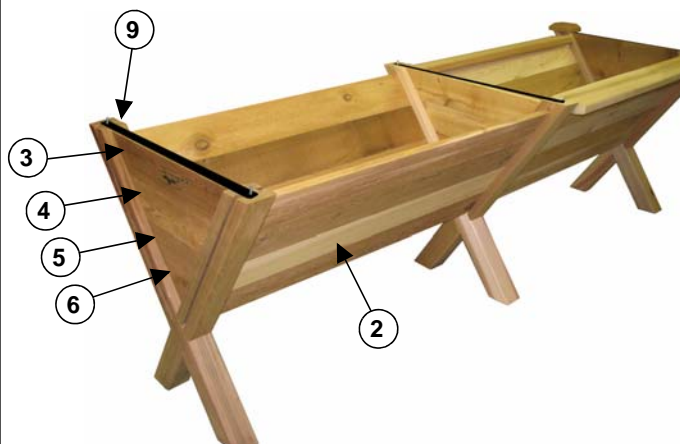

### 5 Bottom Center Rail Assembly

Install the 43-3/8" x 2-1/2" bottom center rail (Item 8) with the tapered edges of the rail facing down.

Install the fabric liner into the Garden Wedge.

Soil Capacity: 6.5 Cubic Feet



### 6 Top Rail Assembly

Install the two 43-3/4" x 5-1/2" shelves (Item 7) onto the side rails on both sides of the Garden Wedge.

Place wedge shelf support braces (Item 13) under shelves approx 8" from each end. Insert screws through shelf support braces and into shelf.



### 7 Post Cap Assembly

Align the hole of the 4" x 4" post cap (Item 10) with stud and tighten until the post cap makes contact with the post. Do not overtighten.

