


1 Parts Identification

Item #: MTK 48-80

Stack matching pieces in piles. Using the parts list, locate and count the individual pieces and verify that you have received the correct number of pieces.

If any pieces are missing or replacement parts are required, contact Gronomics at 1-855-299-6727.

NOTE: Ground preparation is optional, however we recommend leveling area under frame of product, or place product directly on a flat level surface before filling with soil.

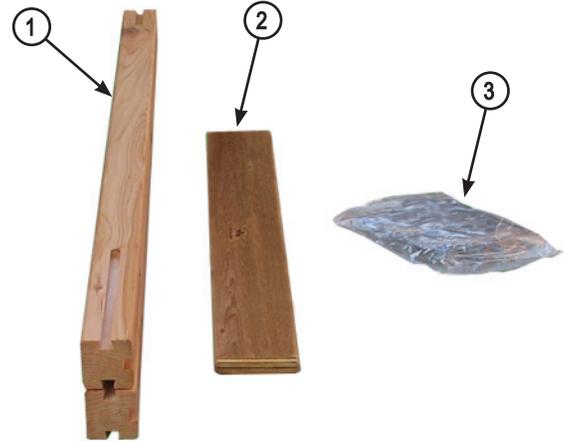

Parts List

ITEM	QTY.	PART #	DESCRIPTION
1	2	M8000	Trellis Post, 4" x 4" x 80"
2	1	R4500L	Side Rail, w/Logo Notched Board, 45" x 5-1/2" x 7/8"
3	1	4880	Trellis Net 48" x 80"

Product Care and Maintenance - Western Red Cedar will turn a weathered grey if left unfinished. Although no finish is required for cedar when used outdoors, a natural oil finish applied regularly will help maintain the beauty and minimize cracking and drying. It is recommended to use **Gronomics Garden Bed Oil (Item # GBO-1Q)**, a non-toxic, food safe finish that is very easy to apply. Apply Oil when air and wind temperatures are between 50-90degrees. Avoid applying in direct sunlight .


2 Post Assembly

Remove one 4" x 4" x 13" post by lifting straight upward and removing from the garden bed.

Install a 4" x 4" x 80" trellis post (Item 1). Align the trellis post slots with the side rails and lower trellis post fully to the ground.

Repeat this procedure for the second trellis post.

Remove Posts And Install 4" x 4" x 80" Trellis Posts

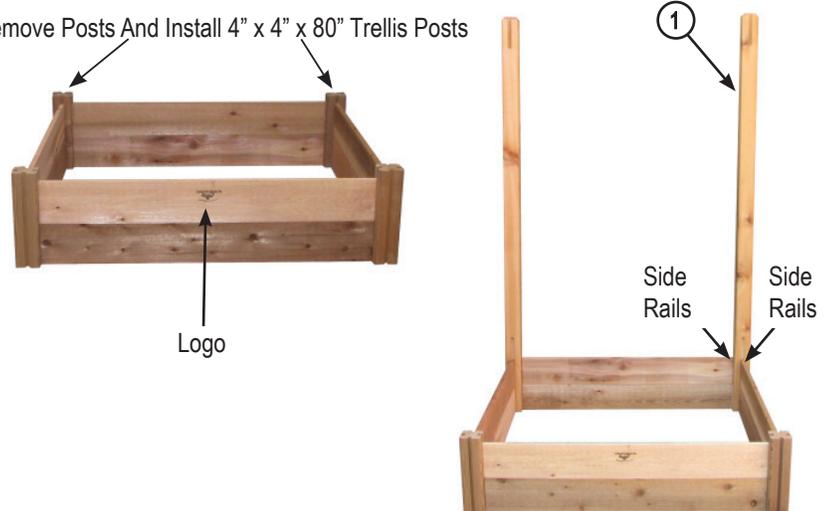

Packaged & Inspected by:


Date:

Continued

3 Net Placement

Weave the trellis net (Item 3) onto the 45" x 5-1/2" side rail (Item 2).

Stretch and secure trellis net across the side rail and lock net into notched ends on each end of the side rail.

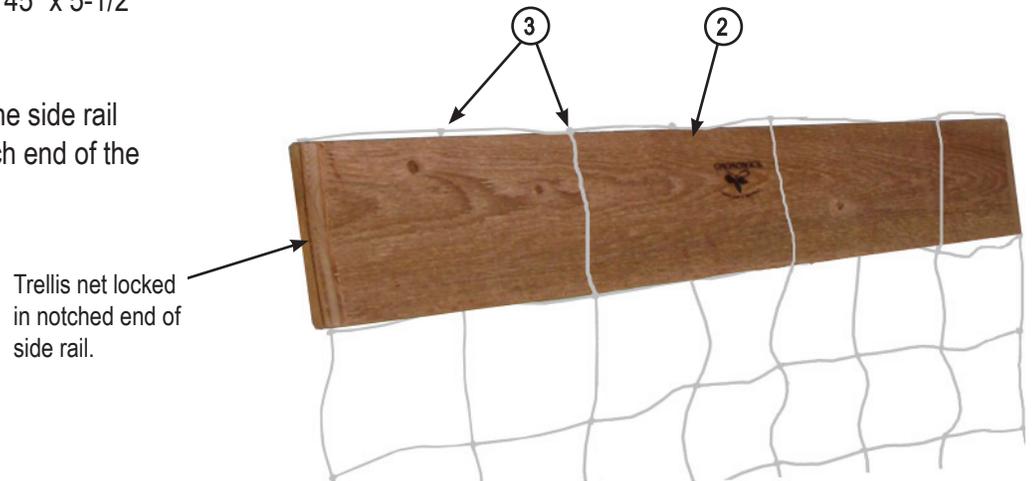


4 Side Rail And Net Placement

Install the 45" x 5-1/2" side rail (Item 2) (with Logo facing the planter box) into the slots on the trellis posts and slide down.

NOTE: Make sure the net is seated in the notches on the ends of the side rail when installing side rail and trellis net onto the trellis posts.

Stretch and secure the trellis net with staples to the garden bed side rail or secure the trellis net to the ground with ground stakes.

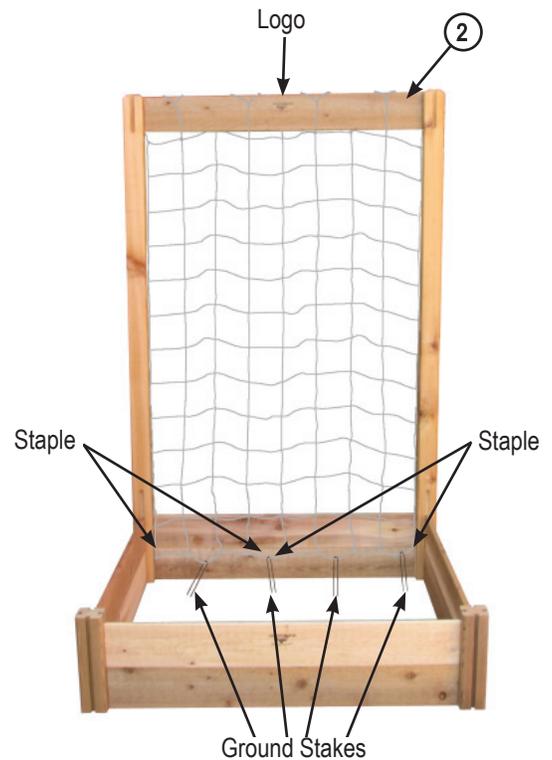

Use ground stakes or staples (supplied in kit) to secure the trellis net.