


1 Parts Identification

Item #: REGB 18-34

Stack matching pieces in piles. Using the parts list, locate and count the individual pieces and verify that you have received the correct number of pieces.

If any pieces are missing or replacement parts are required, contact Gronomics at 1-855-299-6727.

NOTE: It is recommended to place a protective layer between the ground and the pieces during assembly. This will help prevent damage to the pieces.

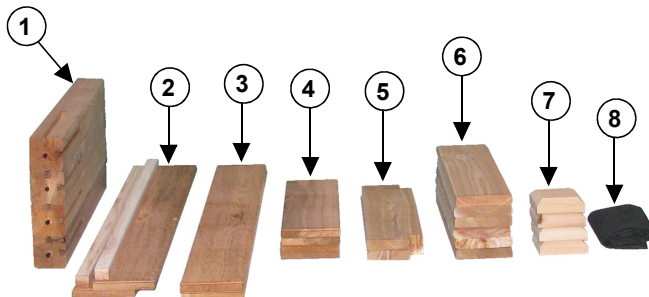

Product Care & Maintenance

Western Red Cedar will turn a weathered grey if left unfinished. Although no finish is required for cedar when used outdoors, a natural oil finish applied regularly will help maintain the beauty and minimize cracking and drying. It is recommended to use **Gronomics Garden Bed Oil (Item# GBO-1Q)**, a non-toxic, food safe finish that is very easy to apply. Apply oil when air and wind temperatures are between 50-90 degrees. Avoid applying in direct sunlight.

Parts List

ITEM	QTY.	PART #	DESCRIPTION
1	4	3200E	Corner Post, 4" x 4" x 32" w/2 Dovetailed Sides 12-3/4" long
2	2	R3102	Side Rail w/Cleat, 31" x 5-1/2" x 7/8"
3	2	R3100, R3100L	Side Rail (one w/Logo), 31" x 5-1/2" x 7/8"
4	4	R1450	Side Rail, 14-1/2" x 5-1/2" x 7/8"
5	2	1538NR	Corner Notched & Ripped Bottom Board, 15-3/8" x 4-1/2" x 1"
6	4	1538	Bottom Board, 15-3/8" x 5-1/2" x 1"
7	4	4545	Post Cap, 4-5/8" x 4-5/8" x 1-1/2"
8	1	FL3652	Fabric Liner 36" x 52"


2 Side Rail Assembly

Stand two 4" x 4" x 32" corner posts (Item 1) upright with slots facing you and slots facing each corner post.

Locate a 31" x 5 1/2" side rail w/cleat (Item 2). With cleat located at the bottom and facing you, install side rail w/cleat into the slots and slide down to the bottom of the slots.

Repeat procedure for the two remaining 4" x 4" x 32" corner posts and 31" x 5-1/2" side rail w/cleat.

(Soil depth option: Cleats located as shown will provide a soil depth of approximately 9". Reverse side rail w/cleat installation, cleats located at top, if a soil depth of approximately 6" is desired).

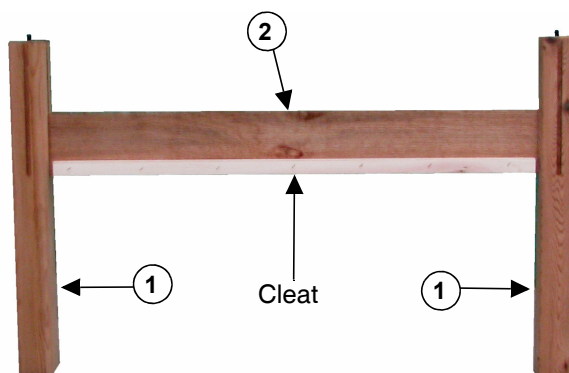


Packaged & Inspected by:

Date:

Continued

3 Side Rail Assembly Continued

Install two 14-1/2" x 5-1/2" side rails (Item 4) into the slots and slide down to the bottom of the slots.

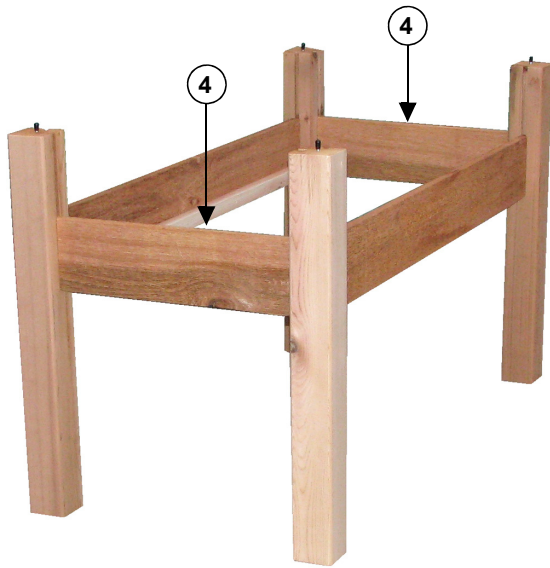


5 Bottom Board and Fabric Installation

Place one 15-3/8" x 4-1/2" corner notched bottom board (Item 5) on each end of the garden bed.

Place four 15-3/8" x 5-1/2" bottom boards (Item 6) into the garden bed. (Gap boards evenly to allow for water drainage).

Place fabric liner into the garden bed.


Soil Capacity: 2.7 Cubic Feet

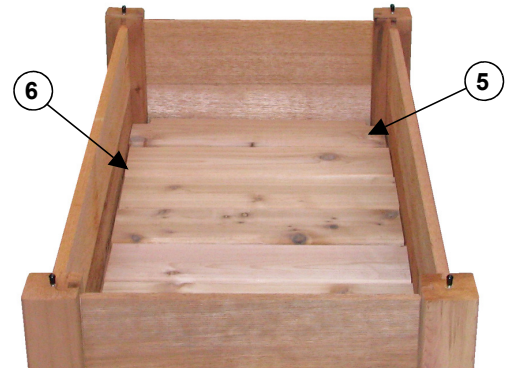

4 Final Side Rail Assembly

Install two 31" x 5-1/2" side rails (Item 3) (one w/logo) into the slots and slide down.

Install two 14-1/2" x 5-1/2" side rails (Item 4) into the slots and slide down.

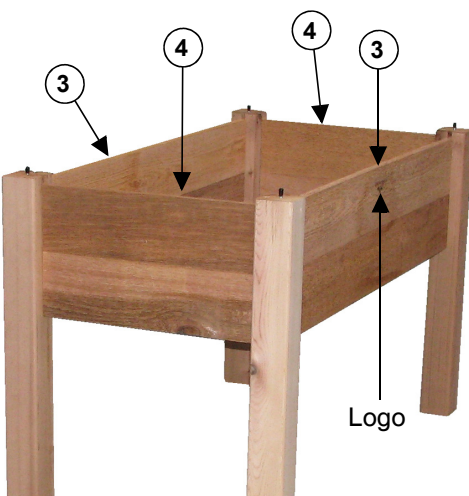

6 Post Cap Assembly

Remove the rubber cap from the corner posts studs.

Align the hole of the 4-5/8" x 4-5/8" post cap (Item 7) with stud and tighten until the cap makes contact with the post.

NOTE: Do not overtighten.

Repeat procedure on all posts.

