


1 Parts Identification

Item #: REGB 34-48

Stack matching pieces in piles. Using the parts list, locate and count the individual pieces and verify that you have received the correct number of pieces.

If any pieces are missing or replacement parts are required, contact Gronomics at 1-855-299-6727.

NOTE: Ground preparation is optional, however we recommend leveling area under frame of product, or place product directly on a flat level surface before filling with soil.

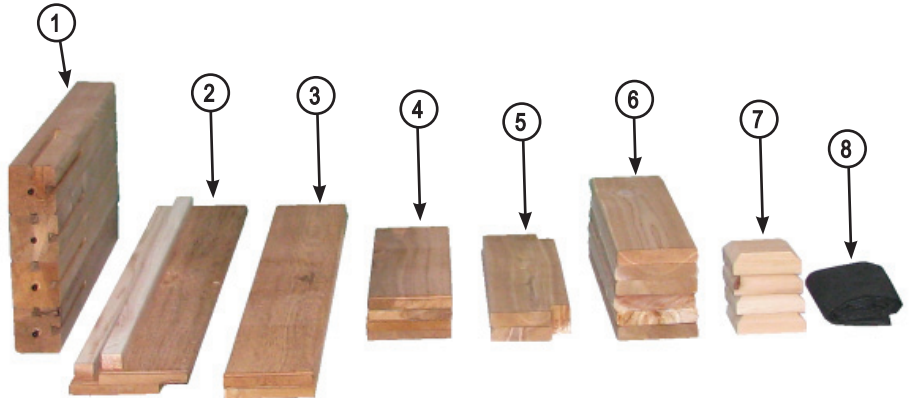

Parts List

ITEM	QTY.	PART #	DESCRIPTION
1	4	3200E	Corner Post, 4" x 4" x 32" w/2 DovetailDepthSide12-3/4"
2	2	R4502	Rail w/Cleat, 45" x 5-1/2" x 7/8"
3	2	R4500, R4500L	Side Rail (one w/Logo), 45" x 5-1/2" x 7/8"
4	4	R3100	Side Rail, 31" x 5-1/2" x 7/8"
5	2	3178N	Corner Notched Bottom Board, 31-7/8" x 5-1/2" x 1"
6	6	3178	Bottom Board, 31-7/8" x 5-1/2" x 1"
7	4	4545	Post Cap 4-5/8"x 4-5/8"x 1-1/2"
8	1	FL3652	Fabric Liner 36" x 52"

Product Care and Maintenance

Western Red Cedar will turn a weathered grey if left unfinished. Although no finish is required for cedar when used outdoors, a natural oil finish applied regularly will help maintain the beauty and minimize cracking and drying. It is recommended to use **Gronomics Garden Bed Oil (Item# GBO-1Q)**, a non-toxic, food safe finish that is very easy to apply.

Apply oil when air and wind temperatures are between 50-90 degrees. Avoid applying in direct sunlight.


2 Side Rail Assembly

Stand two 4" x 4" X 32" corner posts (Item 1) upright with slots facing you and slots facing each corner post.

Locate a 45" x 5-1/2" side rail w/cleat (Item 2). With cleat located at the bottom and facing you, install side rail w/cleat into the slots and slide down to the bottom of the slots.

Repeat procedure for the two remaining corner posts and 45" x 5-1/2" side rail w/cleat.

(Soil depth option: Cleats located as shown will provide a soil depth of approximately 9". Reverse side rail w/cleat installation, cleats located at top, if a soil depth of approximately 6" is desired).

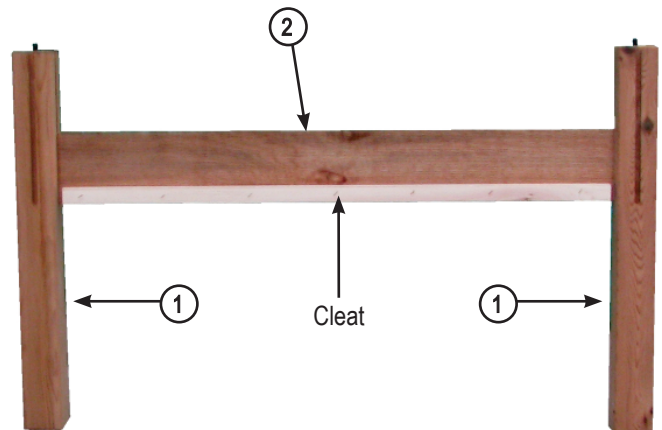


Packaged & Inspected by:

Date:

Continued

3 End Rail Assembly

Install two 31" x 5-1/2" side rails (Item 4) into the upper part of the slots on the two corner posts and slide down to the bottom of the slots.

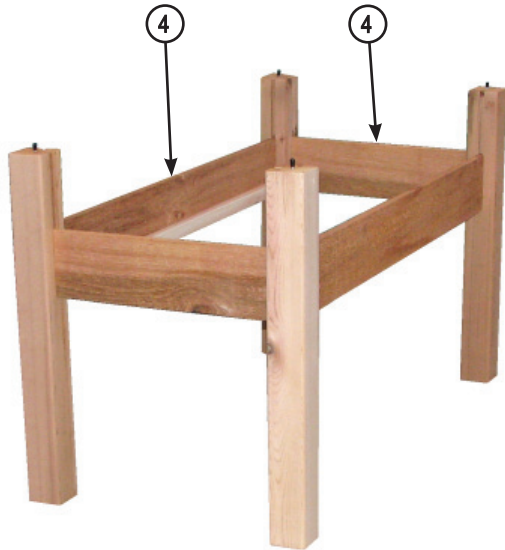


5 Bottom Board and Fabric Installation

Place one 31-7/8" x 5-1/2" corner notched bottom board (Item 5) on each end of the garden bed.

Place six 31-7/8" x 5-1/2" bottom boards (Item 6) into the garden bed. (Gap boards evenly to allow for water drainage).

Install fabric liner into the planter box.


Soil Capacity: 7.4 Cubic Feet

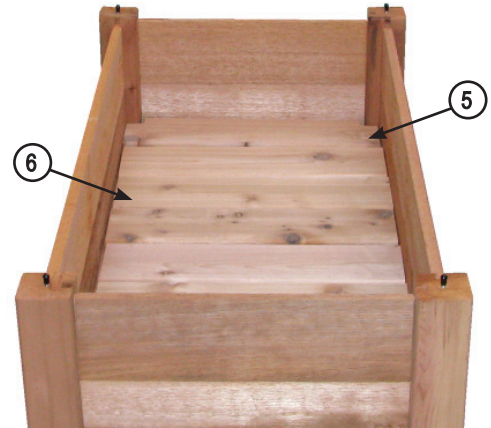

4 Final Side Rail Assembly

Install two 45" x 5-1/2" side rails (Item 3) (one with logo) into the slots on each side of the garden bed and slide down. (Side rail with Logo located to outside).

Install two 31" x 5-1/2" side rails (Item 4) into the slots on each end of the garden bed and slide down.

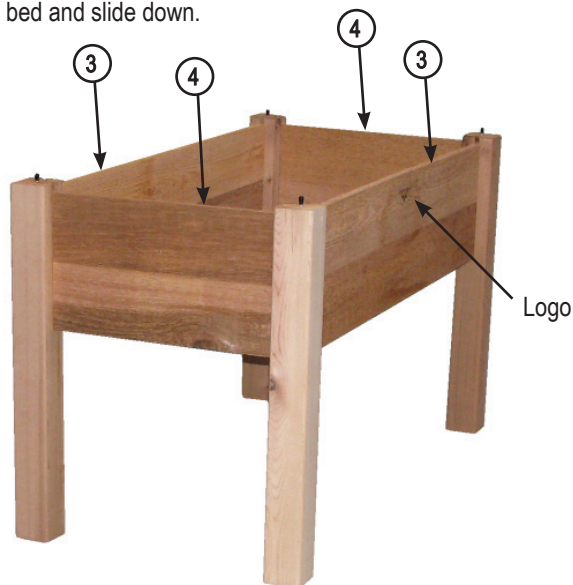

6 Post Cap Assembly

Remove the rubber cap from the corner posts studs.

Align the hole of the 4" x 4" post cap (Item 7) with stud and tighten until the cap makes contact with the post.

NOTE: Do not overtighten.

Repeat procedure on all posts.

