


### 1 Parts Identification

Item #: RPB 18-48

Stack matching pieces in piles. Using the parts list, locate and count the individual pieces and verify that you have received the correct number of pieces.

If any pieces are missing or replacement parts are required, contact Gromonics at 1-855-299-6727.

NOTE: Ground preparation is optional, however we recommend leveling area under frame of product, or place product directly on a flat level surface before filling with soil.

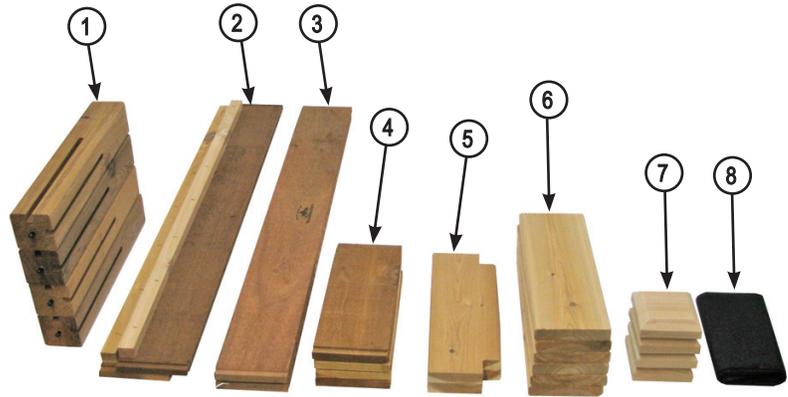

#### Parts List

ITEM	QTY.	PART #	DESCRIPTION
1	4	1900P	Corner Post, 4" x 4" x 19" w/2Dovetail Depth 12-3/4"
2	2	R4502	Side Rail w/Cleat, 45" x 5-1/2" x 1"
3	2	R4500 R4500L	Side Rail, (One w/Logo), 45" x 5-1/2" x 1"
4	4	R1450	Side Rail, 14-1/2" x 5-1/2" x 7/8"
5	2	1538N	Corner Notched Bottom Board, 15-3/8" x 5-1/2" x 1"
6	6	1538	Bottom Board, 15-3/8" x 5-1/2" x 1"
7	4	4545	Post Cap, 4-5/8" x 4-5/8" x 1 1/2"
8	1	FL3652	Fabric Liner, 36" x 52"

#### Product Care and Maintenance

Western Red Cedar will turn a weathered grey if left unfinished. Although no finish is required for cedar when used outdoors, a natural oil finish applied regularly will help maintain the beauty and minimize cracking and drying. It is recommended to use **Gromonics Garden Bed Oil (Item # GBO-1Q)**, a non-toxic, food safe finish that is very easy to apply. Apply Oil when air and wind temperatures are between 50-90degrees. Avoid applying in direct sunlight.


### 2 Side Rail Assembly

Stand two 4" x 4" x 19" corner posts (Item 1) upright with slots facing you and slots facing each post.

Locate a 45" x 5-1/2" side rail w/cleat (Item 2), (with cleat located at the bottom and facing you). Install side rail w/cleat into the upper part of the slots and slide down to the bottom of the slots.

Repeat procedure for the two remaining 4" x 4" x 19" corner posts and the 45" x 5-1/2" side rail w/cleat.

(Soil depth option: Cleats located as shown will provide a soil depth of approximately 9". Reverse side rail w/cleat installation, cleats located at top, if a soil depth of approximately 6" is desired).

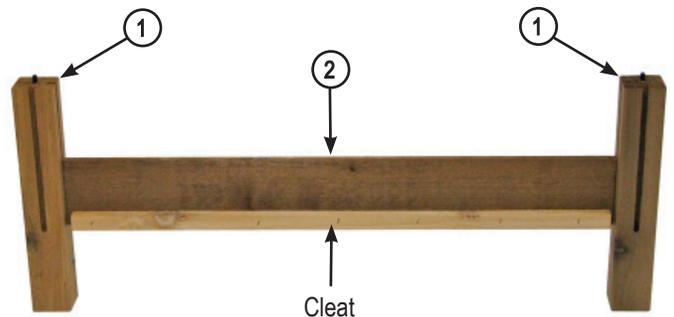


Packaged & Inspected by:

Date:

Continued

### 3 End Side Rail Assembly


Install two 14" x 5-1/2" side rails (Item 4) into the slots at each end of the planter box and slide to the bottom of the slots.

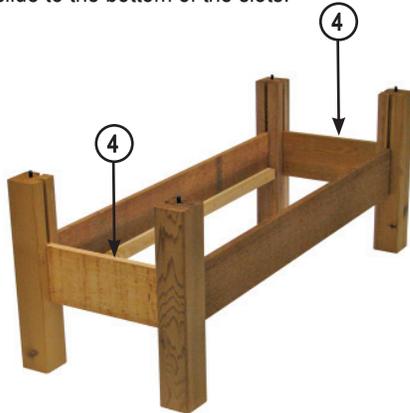

### 4 Final Side Rail Assembly

Install the two 45" x 5-1/2" side rails (Item 3) (one w/Logo) into the slots and slide the side rails down. (Side rail with Logo located to outside).

Install the two remaining 14" x 5-1/2" side rails (Item 4) into the slots at each end of the planter box and slide down.

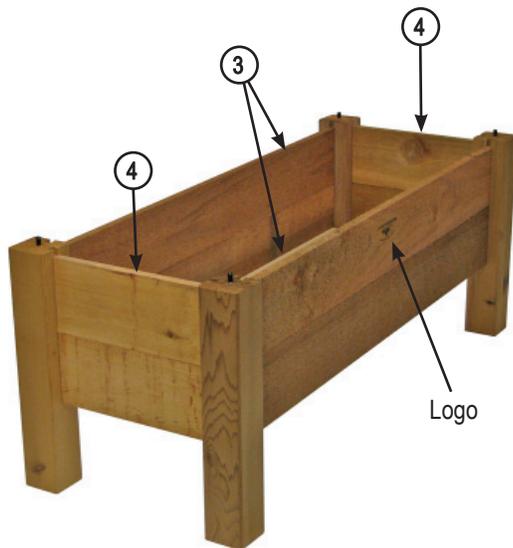

### 5 Bottom Board and Fabric Installation

Place one 15" x 5-1/2" corner notched bottom board (Item 5) on each end of the planter box.

Place six 15" x 5-1/2" bottom boards (Item 6) into the planter box. (Gap boards evenly to allow for water drainage).

Place fabric liner into the planter box.

Soil Capacity: 3.9 Cubic Feet



### 6 Post Cap Assembly

Remove the rubber cap from the corner posts studs.

Align the hole of the 4" x 4" post cap (Item 7) with stud and tighten until the cap makes contact with the post.

NOTE: Do not overtighten.

Repeat procedure on all posts.

