


1 Parts Identification

Item #: VG 32-45

Using the parts list, locate and count the individual pieces and verify that you have received the correct number of pieces.

Check all the pieces for damage. If any pieces are damaged or missing, contact Gronomics at 1-855-299-6727.

NOTE: Ground preparation is optional, however we recommend leveling area under frame of product, or place product directly on a flat level surface before filling with soil.

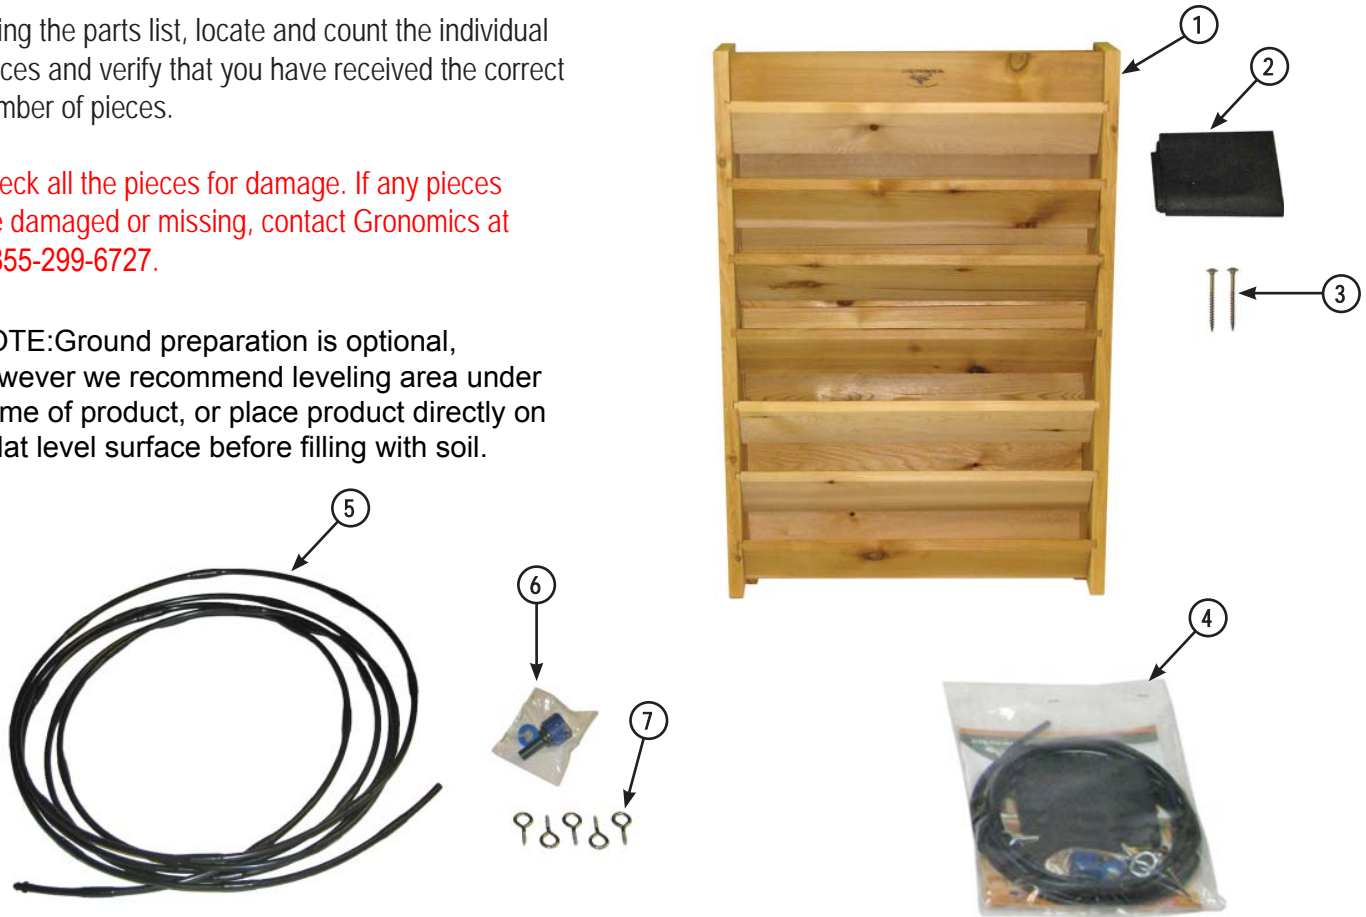

Parts List

ITEM	QTY.	PART #	DESCRIPTION
1	1	VG32-45	Vertical Garden Bed 32"W x 45"H x 9"D
2	1	FL3610	Fabric Liner 36" x 10-1/4"
3	2	RSS10-234ZY	Screw, RSS GRK 10 x 2-3/4"
4	1	GBDIK	Garden Bed Irrigation Kit (Contains Items 5 - 7)
5	1		Irrigation Tubing 16'
6	1		Hose Connector
7	5	SCEY6Z	Eyelet Screws


Packaged & Inspected by: _____ **Date:** _____

Product Care and Maintenance - Western Red Cedar will turn a weathered grey if left unfinished. Although no finish is required for cedar when used outdoors, a natural oil finish applied regularly will help maintain the beauty and minimize cracking and drying. It is recommended to use **Gronomics Garden Bed Oil (Item # GBO-1Q)**, a non-toxic, food safe finish that is very easy to apply. Apply Oil when air and wind temperatures are between 50-90 degrees. Avoid applying in direct sunlight.

Continued

2 Angled Front Shelf Board Removal


Remove the five angled front shelf boards.

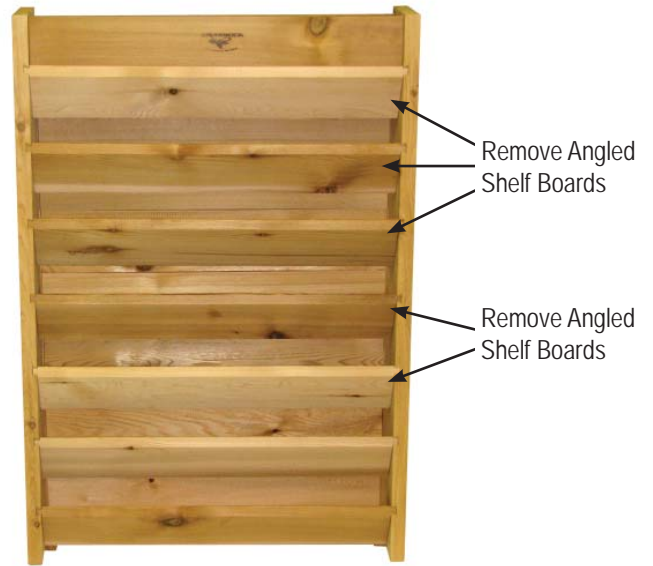

3 Irrigation Kit Assembly

NOTE: The irrigation tubing will be routed through the left side panel hole.

LEFT SIDE PANEL ROUTING- Locate and install five eye bolts (Item 7) into the side rails. Install the eye bolts into the pre-drilled holes in the side panels marked with a **Black "X"**. (Left side panel (**Black "X"**) routing shown).

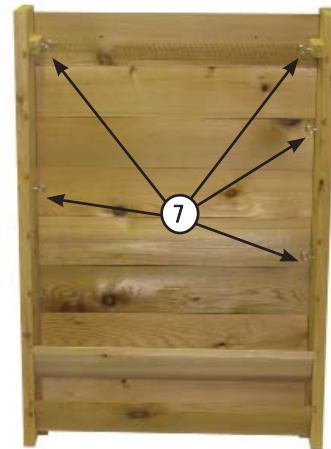


Continued

4 Irrigation Kit Assembly Continued

NOTE: Left side panel routing shown.

Locate the irrigation tubing (Item 5). Route the irrigation tubing (end with plug) through the hole of the left panel and weave the irrigation tubing through the eye bolts (bottom to top).

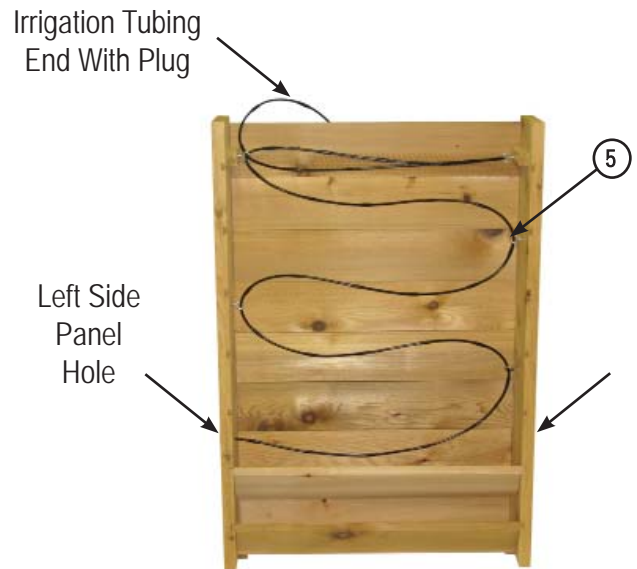


5 Irrigation Kit Assembly Continued

Locate the hose connector and screen (Item 6). Install the screen inside the hose connector (screen facing out).

NOTE: Install the hose connector in the left side panel. (Left side panel routing shown).

Install the irrigation tubing (Item 3) onto the hose connector and install the hose connector into the side panel.

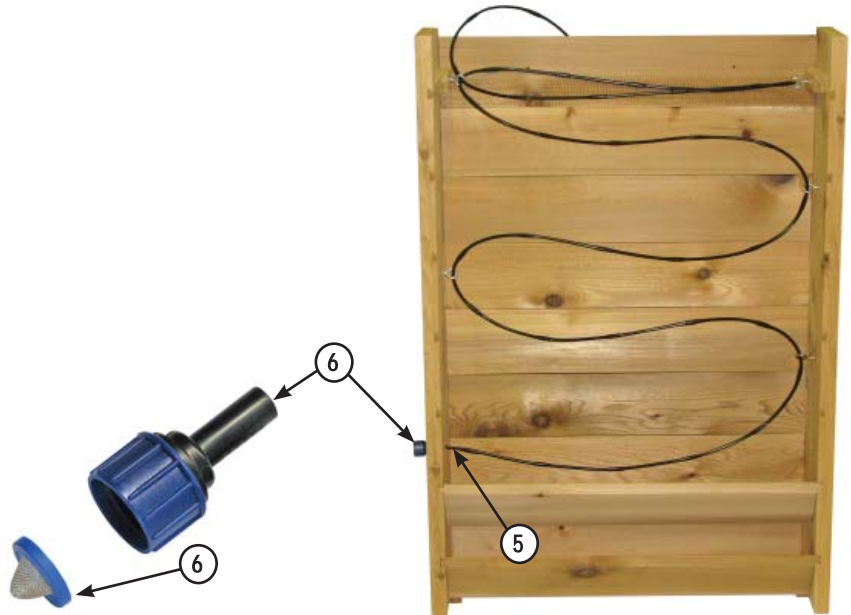

Continued

6 Irrigation Kit Assembly Continued


Remove the plug from the end of the irrigation tubing. Cut the tubing to the desired length. Re-install the plug into the end of the irrigation tubing.

NOTE: If the irrigation tubing needs to be cut shorter, always cut the hose in front of or behind the drip section (enlarged section) of the irrigation tubing.



7 Angled Front Shelf Installation

Install the five angled front shelf boards into the side panel slots with the beveled edge (front edge) facing you.

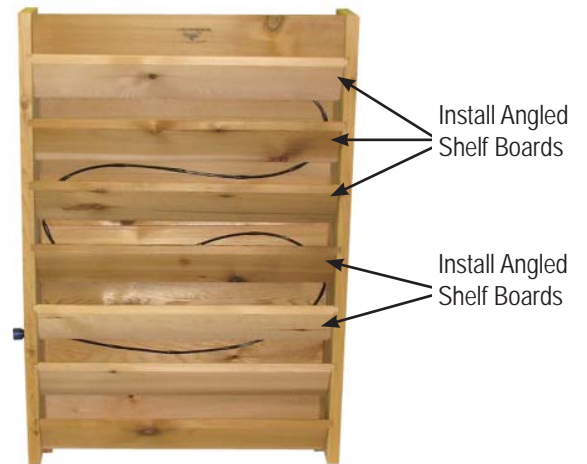


Continued

8 Stabilizing The Garden Bed

NOTE: The angled front shelf board with logo may need to be removed to access screws while fastening the vertical garden to the structure.

NOTE: The garden bed is not intended for hanging on a wall or struture.

Locate and install the two screws (Item 3) into the pre-drilled holes of the top back board. Fasten the vertical garden to a stable structure.

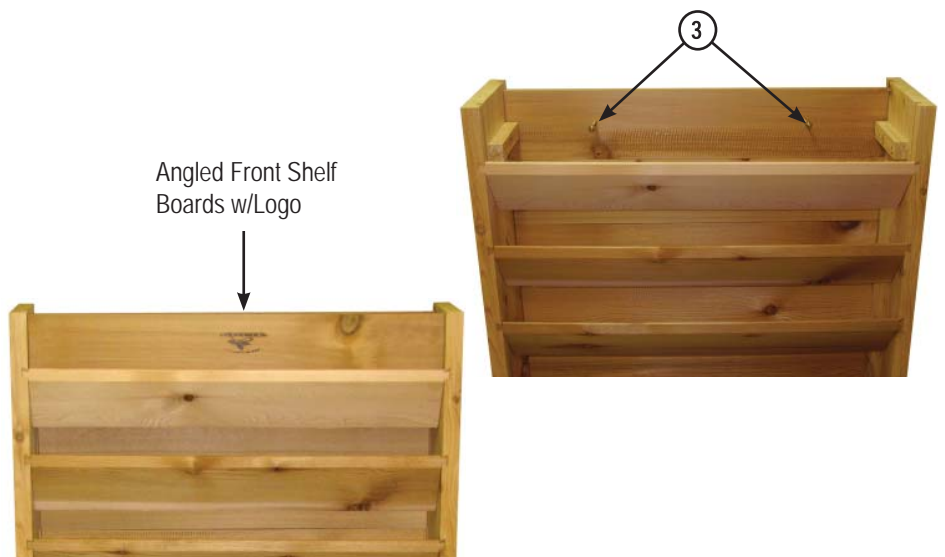

9 Fabric Liner

Locate the piece of fabric liner (Item 2). Place the fabric in the bottom of the vertical garden.

NOTE: Bottom angled front shelf board has been removed for picture clarity.



Continued

10 Planting Bedding

NOTE: Before adding the plant bedding, verify that the vertical garden is securely fastened to a stable structure. Verify that all back rails and shelf rails are completely installed.

CAUTION: When filling the vertical garden with plant bedding, support the irrigation tubing while filling. This will help prevent damage to the irrigation tubing.

Slowly place the plant bedding into the top of the vertical garden. Add plant bedding until it is approximately one inch below the top back and shelf rails.

